

**Barricade[™] g 2.4GHz 54 Mbps Wireless
Cable/DSL Broadband Router**

User Guide

SMC2804WBR



Barricade™ g 2.4 GHz 54 Mbps Wireless Cable/DSL Broadband Router

From SMC's Barricade line of Broadband Routers

SMC®

Networks

38 Tesla

Irvine, CA 92618

Phone: (949) 679-8000

July 2003

Revision Number: R03

COPYRIGHT

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2003 by
SMC Networks, Inc.
38 Tesla
Irvine, CA 92618

All rights reserved.

Trademarks:

SMC is a registered trademark; and Barricade is a trademark of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

COMPLIANCES

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC Caution: To assure continued compliance, (example - use only shielded interface cables when connecting to computer or peripheral devices) any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE: FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters (8 inches) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

EC Conformance Declaration - Class B

SMC contact for these products in Europe is:

SMC Networks Europe,
Edificio Conata II,
Calle Frutuós Gelabert 6-8, 2^o, 4^a,
08970 - Sant Joan Despí,
Barcelona, Spain.

This information technology equipment complies with the requirements of the Council Directive 89/336/EEC on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility and 73/23/EEC for electrical equipment used within certain voltage limits and the Amendment Directive 93/68/EEC. For the evaluation of the compliance with these Directives, the following standards were applied:

- RFI * Limit class B according to EN 55022:1998
- Emission: * Limit class B for harmonic current emission according to EN 61000-3-2/1995
- * Limitation of voltage fluctuation and flicker in low-voltage supply system according to EN 61000-3-3/1995
- Immunity: * Product family standard according to EN 55024:1998
- * Electrostatic Discharge according to EN 61000-4-2:1995 (Contact Discharge: ± 4 kV, Air Discharge: ± 8 kV)
- * Radio-frequency electromagnetic field according to EN 61000-4-3: 1996 (80 - 1000 MHz with 1 kHz AM 80% Modulation: 3 V/m)
- * Electrical fast transient/burst according to EN 61000-4-4:1995(AC/DC power supply: ± 1 kV, Data/Signal lines: ± 0.5 kV)
- * Surge immunity test according to EN 61000-4-5:1995(AC/DC Line to Line: ± 1 kV, AC/DC Line to Earth: ± 2 kV)
- * Immunity to conducted disturbances, Induced by radio-frequency fields: EN 61000-4-6:1996(0.15 - 80 MHz with 1 kHz AM 80% Modulation: 3 V/m)
- * Power frequency magnetic field immunity test according to EN 61000-4-8:1993(1 A/m at frequency 50 Hz)
- * Voltage dips, short interruptions and voltage variations immunity test according to EN 61000-4-11:1994(>95% Reduction @ 10 ms, 30% Reduction @ 500 ms, >95% Reduction @ 5000 ms)
- LVD: * EN60950(A1/1992; A2/1993; A3/1993; A4/1995; A11/1997)

Industry Canada - Class B

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par le ministère des Communications.

Australia AS/NZS 3548 (1995) - Class B



ACN 069 351 613

SMC contact for products in Australia is:

SMC Communications Pty. Ltd.
Suite 18, 12 Tryon Road,
Lindfield NSW2070,
Phone: 61-2-8875-7887
Fax: 61-2-8875-7777

Safety Compliance

Underwriters Laboratories Compliance Statement

Important! Before making connections, make sure you have the correct cord set. Check it (read the label on the cable) against the following:

Operating Voltage	Cord Set Specifications
120 Volts	UL Listed/CSA Certified Cord Set
	Minimum 18 AWG
	Type SVT or SJT three conductor cord
	Maximum length of 15 feet
	Parallel blade, grounding type attachment plug rated 15 A, 125 V
240 Volts (Europe only)	Cord Set with H05VV-F cord having three conductors with minimum diameter of 0.75 mm ²
	IEC-320 receptacle
	Male plug rated 10 A, 250 V

The unit automatically matches the connected input voltage. Therefore, no additional adjustments are necessary when connecting it to any input voltage within the range marked on the rear panel.

Wichtige Sicherheitshinweise (Germany)

1. Bitte lesen Sie diese Hinweise sorgfältig durch.
2. Heben Sie diese Anleitung für den späteren Gebrauch auf.
3. Vor jedem Reinigen ist das Gerät vom Stromnetz zu trennen. Verwenden Sie keine Flüssigoder Aerosolreiniger. Am besten eignet sich ein angefeuchtetes Tuch zur Reinigung.
4. Die Netzanschluß Steckdose soll nahe dem Gerät angebracht und leicht zugänglich sein.
5. Das Gerät ist vor Feuchtigkeit zu schützen.
6. Bei der Aufstellung des Gerätes ist auf sicheren Stand zu achten. Ein Kippen oder Fallen könnte Beschädigungen hervorrufen.
7. Die Belüftungsöffnungen dienen der Luftzirkulation, die das Gerät vor Überhitzung schützt. Sorgen Sie dafür, daß diese Öffnungen nicht abgedeckt werden.
8. Beachten Sie beim Anschluß an das Stromnetz die Anschlußwerte.
9. Verlegen Sie die Netzanschlußleitung so, daß niemand darüber fallen kann. Es sollte auch nichts auf der Leitung abgestellt werden.
10. Alle Hinweise und Warnungen, die sich am Gerät befinden, sind zu beachten.
11. Wird das Gerät über einen längeren Zeitraum nicht benutzt, sollten Sie es vom Stromnetz trennen. Somit wird im Falle einer Überspannung eine Beschädigung vermieden.
12. Durch die Lüftungsöffnungen dürfen niemals Gegenstände oder Flüssigkeiten in das Gerät gelangen. Dies könnte einen Brand bzw. elektrischen Schlag auslösen.
13. Öffnen sie niemals das Gerät. Das Gerät darf aus Gründen der elektrischen Sicherheit nur von autorisiertem Servicepersonal geöffnet werden.
14. Wenn folgende Situationen auftreten ist das Gerät vom Stromnetz zu trennen und von einer qualifizierten Servicestelle zu überprüfen:
 - a. Netzkabel oder Netzstecker sind beschädigt.
 - b. Flüssigkeit ist in das Gerät eingedrungen.
 - c. Das Gerät war Feuchtigkeit ausgesetzt.
 - d. Wenn das Gerät nicht der Bedienungsanleitung entsprechend funktioniert oder Sie mit Hilfe dieser Anleitung keine Verbesserung erzielen.
 - e. Das Gerät ist gefallen und/oder das Gehäuse ist beschädigt.
 - f. Wenn das Gerät deutliche Anzeichen eines Defektes aufweist.
15. Stellen Sie sicher, daß die Stromversorgung dieses Gerätes nach der EN 60950 geprüft ist. Ausgangswerte der Stromversorgung sollten die Werte von AC 7,5-8 V, 50-60 Hz nicht über oder unterschreiten sowie den minimalen Strom von 1 A nicht unterschreiten.

Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 Teil 1000 beträgt 70 dB(A) oder weniger.

TABLE OF CONTENTS

About the Wireless Barricade g Router	1
LED Indicators	1
Features and Benefits	2
Installing the Wireless Barricade g Router	3
Package Contents	3
Hardware Description	4
System Requirements	6
Connect the System	6
Basic Installation Procedure	7
Configuring Client TCP/IP	12
Installing TCP/IP	12
Windows 95/98/Me	12
Windows 2000	13
Setting Up TCP/IP	15
Configuring Your Computer in Windows 95/98/Me	15
Configuring Your Computer in Windows NT 4.0	18
Configuring Your Computer in Windows 2000	20
Configuring Your Computer in Windows XP	21
Configuring a Macintosh Computer	22
Manual IP Configuration (for all Windows OS)	23
Verifying Your TCP/IP Connection	25
Configuring the Wireless Barricade g Router	26
Browser Configuration	26
Disable Proxy Connection	27
Navigating the Web Browser Interface	28
Making Configuration Changes	29
Setup Wizard	29
Time Zone	29
Broadband Type	30
Advanced Setup	33
System	35
WAN	39

TABLE OF CONTENTS

LAN 45

Wireless 46

NAT - Network Address Translation 54

Firewall 57

DDNS (Dynamic DNS) Settings 69

UPnP (Universal Plug and Play) Setting 70

Tools 71

Status 74

Troubleshooting75


Specifications78

ABOUT THE WIRELESS BARRICADE G ROUTER

Congratulations on your purchase of the Wireless Barricade™ g Broadband Router. SMC is proud to provide you with a powerful yet simple communication device for connecting your local area network (LAN) to the Internet.

LED Indicators

The Wireless Barricade g Router includes status LED indicators, as described in the following figure and table.

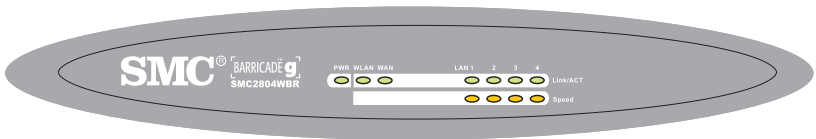

LED	Status	Description
PWR (Green)	On	The Wireless Barricade g Router is receiving power.
WLAN (Green)	On	The Wireless Barricade g Router has established a valid wireless connection.
WAN (Green)	On	The WAN port has established a valid network connection.
Link/ACT (Green)	On	The indicated LAN port has established a valid network connection.
	Flashing	The indicated LAN port is transmitting or receiving traffic.
Speed (Amber)	Off	The indicated LAN port has established a valid 10 Mbps network connection.
	On	The indicated LAN port has established a valid 100 Mbps network connection.

Features and Benefits

- Internet connection to DSL or cable modem via a 10/100 Mbps WAN port
- Local network connection via 10/100 Mbps Ethernet ports or 54 Mbps wireless interface (supporting up to 253 mobile users)
- 802.11g draft Compliant – interoperable with multiple vendors
- Advanced security through 64/128-bit WEP encryption, 802.1x, SSID broadcast disabled, and MAC address filtering features to protect your sensitive data and authenticate only authorized users to your network
- Provides seamless roaming within 802.11g draft WLAN environment
- DHCP for dynamic IP configuration, and DNS for domain name mapping
- Firewall with Stateful Packet Inspection, client privileges, hacker prevention, DoS, and NAT
- NAT also enables multi-user access with a single-user account, and virtual server functionality (providing protected access to Internet services such as web, mail, FTP, and Telnet)
- Virtual Private Network support using PPTP, L2TP, or IPSec pass-through
- User-definable application sensing tunnel supports applications requiring multiple connections
- Parental controls allow the user to restrict web browsing
- Automatic E-mail alerts when the network is being attacked
- Easy setup through a web browser on any operating system that supports TCP/IP
- Compatible with all popular Internet applications

INSTALLING THE WIRELESS BARRICADE g ROUTER

Before installing the Wireless Barricade™ g Broadband Router, verify that you have all the items listed under “Package Contents.” If any of the items are missing or damaged, contact your local SMC distributor. Also be sure that you have all the necessary cabling before installing the Router. After installing the Router, refer to the web-based configuration program in “Configuring the Wireless Barricade g Router” on page 26 for information on configuring the Router.

Package Contents

After unpacking the Wireless Barricade g Broadband Router, check the contents of the box to be sure you have received the following components:

- Wireless Barricade g Broadband Router
- Power adapter
- One CAT-5 Ethernet cable
- Four rubber feet
- Installation CD containing this User Guide and EZ 3-Click Installation Wizard
- Quick Installation Guide

Immediately inform your dealer in the event of any incorrect, missing or damaged parts. If possible, please retain the carton and original packing materials in case there is a need to return the product.

Please register on SMC's web site at www.smc.com The Wireless Barricade g Router is covered by a limited lifetime warranty.

Hardware Description

The Router can be connected to the Internet or to a remote site using its RJ-45 WAN port. It can be connected directly to your PC or to a local area network using any of the Fast Ethernet LAN ports.

Access speed to the Internet depends on your service type. Full-rate ADSL can provide up to 8 Mbps downstream and 640 Kbps upstream. G.lite (or splitterless) ADSL provides up to 1.5 Mbps downstream and 512 Kbps upstream. Cable modems can provide up to 36 Mbps downstream and 2 Mbps upstream. ISDN can provide up to 128 Kbps when using two bearer channels. PSTN analog connections can now run up to 56 Kbps. However, you should note that the actual rate provided by specific service providers may vary dramatically from these upper limits.

Although access speed to the Internet is determined by the modem type connected to the Router, data passing between devices connected to your local area network can run up to 100 Mbps over the Fast Ethernet ports.

The Router includes an LED display on the front panel for system power and port indications that simplifies installation and network troubleshooting. It also provides four RJ-45 LAN ports and one RJ-45 WAN port on the rear panel.

- 4 RJ-45 ports for connection to a 10BASE-T/100BASE-TX Ethernet Local Area Network (LAN). These ports can auto-negotiate the operating speed to 10/100 Mbps, the mode to half/full duplex, and the pin signals to MDI/MDI-X (i.e., allowing these ports to be connected to any network device with straight-through cable). These ports can be connected directly to a PC or to a server equipped with an Ethernet network interface card, or to a networking device such as an Ethernet hub or switch.

Hardware Description

- One RJ-45 port for connection to a DSL or cable modem (WAN). This port also auto-negotiates operating speed to 10/100 Mbps, the mode to half/full duplex, and the pin signals to MDI/MDI-X.

The following figure shows the components of the Router:

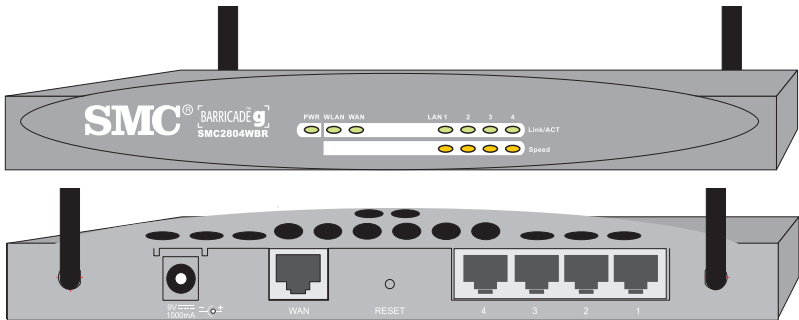


Figure 1. Front and Rear Panels

Item	Description
Reset Button	Use this button to reset the power and restore the default factory settings.
LEDs	Power, WLAN, WAN and LAN port status indicators. (See “LED Indicators” on page 1.)
LAN Ports	Fast Ethernet ports (RJ-45). Connect devices (such as a PC, hub or switch) on your local area network to these ports.
WAN Port	WAN port (RJ-45). Connect your cable modem, DSL modem, or an Ethernet router to this port.
Power Inlet	Connect the included power adapter to this inlet. Warning: Using the wrong type of power adapter may damage your router.

System Requirements

You must have an ISP that meets the following minimum requirements:

- Internet access from your local telephone company or Internet Service Provider (ISP) using a DSL modem or cable modem.
- A PC using a fixed IP address or dynamic IP address assigned via DHCP, as well as a Gateway server address and DNS server address from your service provider.
- A computer equipped with a 10 Mbps, 100 Mbps, or 10/100 Mbps Fast Ethernet card, or a USB-to-Ethernet converter.
- TCP/IP network protocol installed on each PC that needs to access the Internet.
- A Java-enabled web browser, such as Microsoft Internet Explorer 5.0 or above, or Netscape Communicator 4.0 or above installed on one PC at your site for configuring the Router.

Connect the System

The Router can be positioned at any convenient location in your office or home. No special wiring or cooling requirements are needed. You should, however comply with the following guidelines:

- Keep the Router away from any heating devices.
- Do not place the Router in a dusty or wet environment.

You should also remember to turn off the power, remove the power cord from the outlet, and keep your hands dry when you install the Router.

Basic Installation Procedure

1. **Connect the LAN:** Connect the Router to your PC, or to a hub or switch. Run Ethernet cable from one of the LAN ports on the rear of the Router to your computer's network adapter or to another network device.

You may also connect the Router to your PC (using a wireless client adapter) via radio signals. Position both antennas on the back of the Router into the desired positions. For more effective coverage, position the antennas along different axes. For example, try positioning the antennas around 45 to 90 degrees apart. **(The antennas emit signals along the toroidal plane – and thus provide more effective coverage when positioned along different axes.)**

2. **Connect the WAN:** Prepare an Ethernet cable for connecting the Router to a cable/xDSL modem or Ethernet router.
3. **Power on:** Connect the power adapter to the Router.

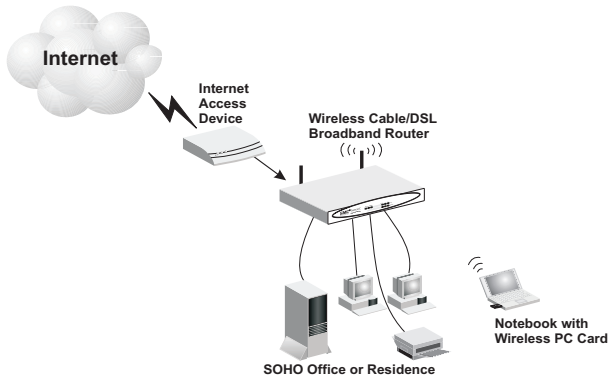


Figure 2. Connecting the Wireless Barricade g Router

Installing the Wireless Barricade g Router

Attach to Your Network Using Ethernet Cabling

The four LAN ports on the Router auto-negotiate the connection speed to 10 Mbps Ethernet or 100 Mbps Fast Ethernet, and the transmission mode to half duplex or full duplex.

Use twisted-pair cable to connect any of the four LAN ports on the Router to an Ethernet adapter on your PC. Otherwise, you can cascade any of the LAN ports on the Router to an Ethernet hub or switch, and then connect your PC or other network equipment to the hub or switch. When inserting an RJ-45 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated.

Warning: Do not plug a phone jack connector into any RJ-45 port. This may damage the Router. Instead, use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

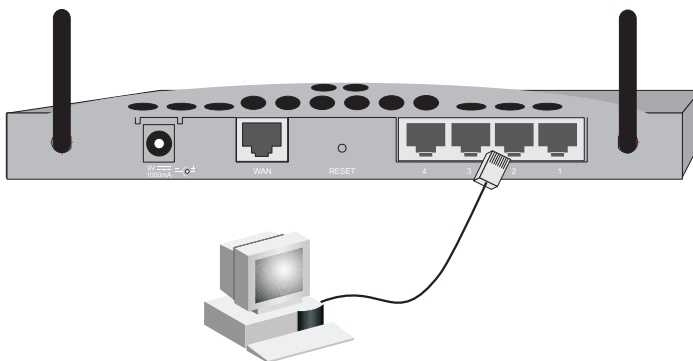


Figure 3. Making the LAN Connections

Attach to Your Network Using Radio Signals

Install a wireless network adapter in each computer that will be connected to the Internet or your local network via radio signals. SMC currently offers several wireless network cards, including the SMC2802W and SMC2835W wireless cards.

Rotate both antennas on the back of the Router to the desired position. For more effective coverage, position the antennas around 45 to 90 degrees apart. Try to place the Router in a position that is located in the center of your wireless network. Normally, the higher you place the antenna, the better the performance. Ensure that the Router's location provides optimal reception throughout your home or office.

Computers equipped with a wireless adapter can communicate with each other as an independent wireless LAN by configuring each computer to the same radio channel. However, the Router can provide access to your wired/wireless LAN or to the Internet for all wireless workstations. Each wireless PC in this network infrastructure can talk to any computer in the wireless group via a radio link, or access other computers or network resources in the wired LAN infrastructure or over the Internet via the Router.

The wireless infrastructure configuration not only extends the accessibility of wireless PCs to the wired LAN, but also increases the effective wireless transmission range for wireless PCs by retransmitting incoming radio signals through the Router.

Installing the Wireless Barricade g Router

A wireless infrastructure can be used for access to a central database, or for connection between mobile workers, as shown in the following figure:

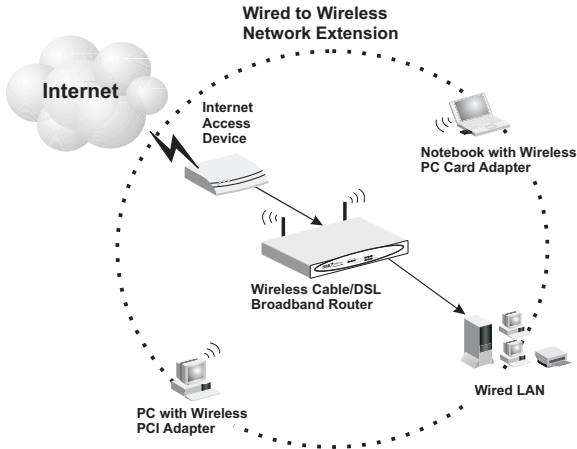


Figure 4. Making the WLAN Connections

Attach the Wireless Barricade g Router to the Internet

If Internet services are provided through an xDSL or cable modem, use unshielded or shielded twisted-pair Ethernet cable (Category 3 or greater) with RJ-45 plugs to connect the broadband modem directly to the WAN port on the Router.

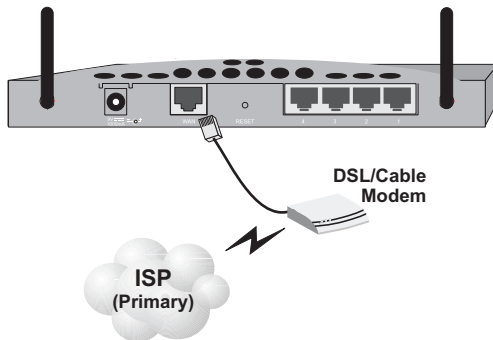


Figure 5. Making the WAN Connection

Note: When connecting to the WAN port, use 100-ohm Category 3, 4, or 5 shielded or unshielded twisted-pair cable with RJ-45 connectors at both ends for all connections.

Connecting the Power Adapter

Plug the power adapter into the power socket on the Router, and the other end into a power outlet. Check the indicator marked "PWR" on the front panel to be sure it is on. If the power indicator does not light, refer to "Troubleshooting" on page 75.


CONFIGURING CLIENT TCP/IP

If you have not previously installed the TCP/IP protocols on your client PCs, refer to the following section. If you need information on how to configure a TCP/IP address on a PC, refer to “Setting Up TCP/IP” on page 15.


Installing TCP/IP

Windows 95/98/Me

1. Click Start/Settings/Control Panel.
2. Double-click the Network icon and select the Configuration tab in the Network window.
3. Click the Add button.
4. Double-click Protocol.

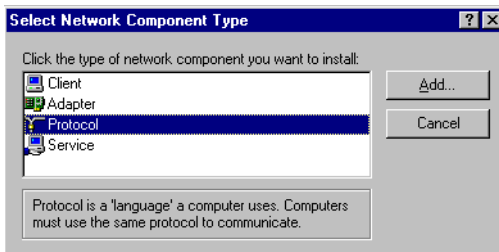

5. Select Microsoft in the manufacturers list. Select TCP/IP in the Network Protocols list. Click the OK button to return to the Network window.

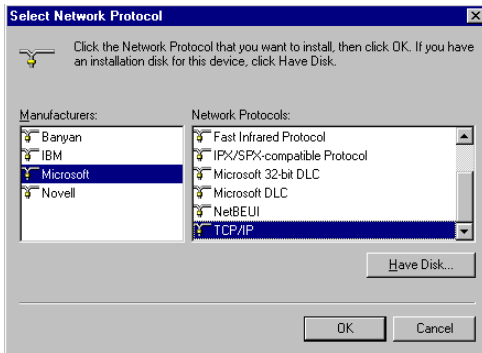


6. The TCP/IP protocol will be listed in the Network window. Click OK. The operating system may prompt you to restart your system. Click Yes and the computer will shut down and restart.

Windows 2000


1. Click the Start button and choose Settings, then click the Network and Dial-up Connections icon.
2. Double-click the Local Area Connection icon, and click the Properties button on the General tab.
3. Click the install... button.

Configuring Client TCP/IP

4. Double-click Protocol.

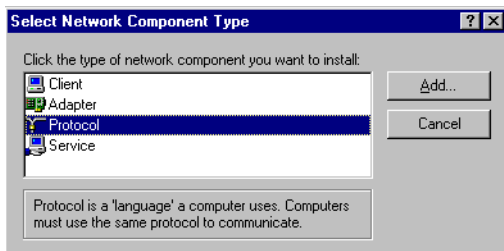

5. Choose Internet Protocol (TCP/IP). Click the OK button to return to the Network window.

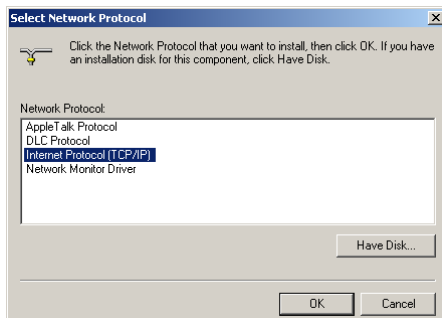

6. The TCP/IP protocol will be listed in the Network window. Click OK to complete the installation procedure.

Setting Up TCP/IP

To access the Internet through the Router, you must configure the network settings of the computers on your LAN to use the same IP subnet as the Router. The default network settings for the Router are:

Gateway IP Address: 192.168.2.1

Subnet Mask: 255.255.255.0

Note: These settings may be changed to suit your network requirements, but you must first configure at least one computer as described in this chapter to access the Router's web configuration interface. See "Configuring the Wireless Barricade g Router" on page 26 for information on configuring the Router.)

If you have not previously configured TCP/IP for your computer, refer to "Configuring Client TCP/IP" on page 12. The IP address of the connected client PC should be 192.168.2.x (where x means 2–254). You can set the IP address for client PCs either by automatically obtaining an IP address from the Router's DHCP service or by manual configuration.


Configuring Your Computer in Windows 95/98/Me

You may find that the instructions here do not exactly match your version of Windows. This is because these steps and screenshots were created in Windows 98. Windows 95 and Windows Millennium Edition are very similar, but not identical, to Windows 98.


1. From the Windows desktop, click Start/Settings/Control Panel.
2. In the Control Panel, locate and double-click the Network icon.

Configuring Client TCP/IP

3. On the Network window Configuration tab, double-click the TCP/IP entry for your network card.

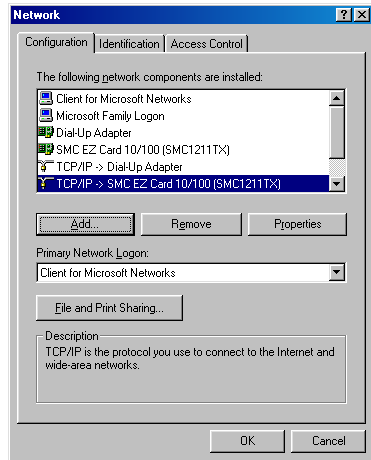

4. Click the IP Address tab.

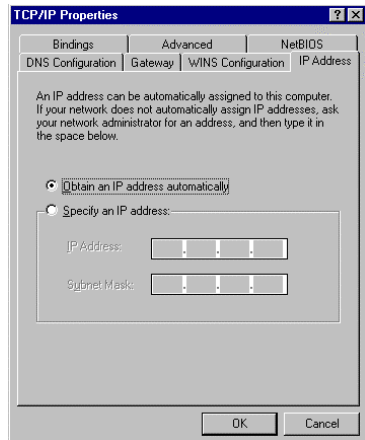

5. Click the “Obtain an IP address” option.
6. Next click on the Gateway tab and verify the Gateway field is blank. If there are IP addresses listed in the Gateway section, highlight each one and click Remove until the section is empty.
7. Click the OK button to close the TCP/IP Properties window.

Setting Up TCP/IP

8. On the Network Properties Window, click the OK button to save these new settings.



Note: Windows may ask you for the original Windows installation disk or additional files. Check for the files at c:\windows\options\cabs, or insert your Windows CD-ROM into your CDROM drive and check the correct file location, e.g., D:\win98, D:\win9x. (if D is the letter of your CD-ROM drive).

9. Windows may prompt you to restart the PC. If so, click the Yes button. If Windows does not prompt you to restart your computer, do so to insure your settings.

Obtain IP Settings from Your Wireless Barricade g Router

Now that you have configured your computer to connect to your Router, it needs to obtain new network settings. By releasing old IP settings and renewing them with settings from your Router, you will also verify that you have configured your computer correctly.


1. Click Start/Run.
2. Type WINIPCFG and click OK.
3. From the drop-down menu, select your network card. Click Release and then Renew. Verify that your IP address is now 192.168.2.xxx, your Subnet Mask is 255.255.255.0 and your Default Gateway is 192.168.2.1. These values confirm that the Router is functioning. Click OK to close the IP Configuration window.

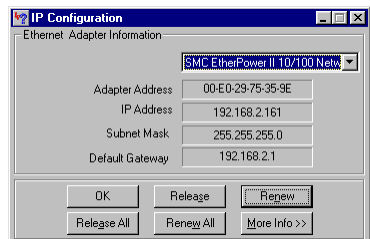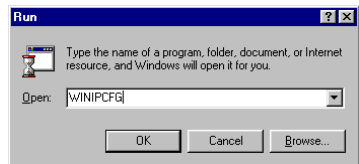


Configuring Client TCP/IP

Configuring Your Computer in Windows NT 4.0

1. From the Windows desktop click Start/Settings/Control Panel.
2. Double-click the Network icon.

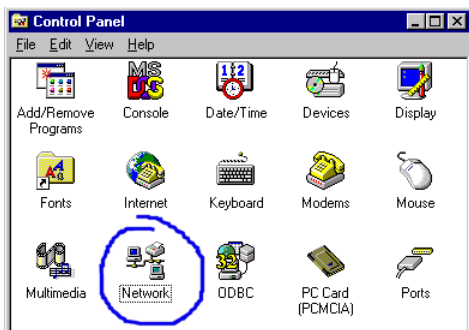

3. Click on the Protocols tab.
4. Double-click TCP/IP Protocol.

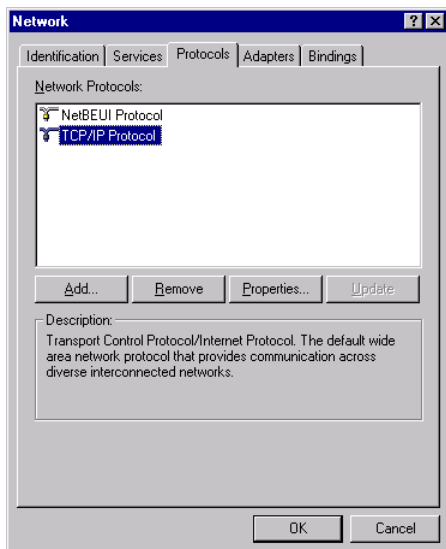


5. Click on the IP Address tab.
6. In the Adapter drop-down list, be sure your Ethernet adapter is selected.

7. Click on "Obtain an IP address from a DHCP server."
8. Click OK to close the window.
9. Windows may copy files and will then prompt you to restart your system. Click Yes and your computer will shut down and restart.

Obtain IP Settings From Your Wireless Barricade g Router

Now that you have configured your computer to connect to the Router, it needs to obtain new network settings. By releasing old IP settings and renewing them with settings from the Router, you will also verify that you have configured your computer correctly.

1. On the Windows desktop, click Start/Programs/Command Prompt.
2. In the Command Prompt window, type IPCONFIG /RELEASE and press the <ENTER> key.

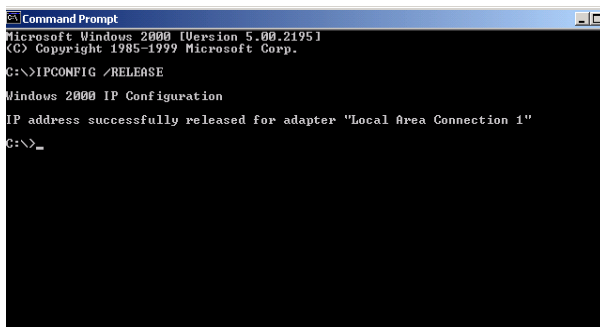

```
Command Prompt
Microsoft Windows 2000 [Version 5.00.2195]
(C) Copyright 1985-1999 Microsoft Corp.

C:\>IPCONFIG /RELEASE


Windows 2000 IP Configuration

IP address successfully released for adapter "Local Area Connection 1"

C:\>_
```

Configuring Client TCP/IP

3. Type IPCONFIG /RENEW and press the <ENTER> key. Verify that your IP Address is now 192.168.2.xxx, your Subnet Mask is 255.255.255.0 and your Default Gateway is 192.168.2.1. These values confirm that the Router is functioning

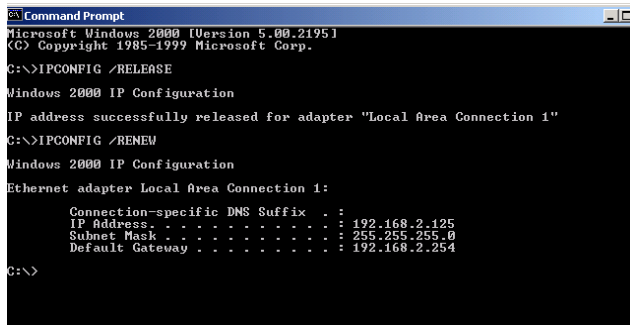

```
Microsoft Windows [Version 5.00.2195]
(C) Copyright 1985-1999 Microsoft Corp.

C:\>IPCONFIG /RELEASE

Windows 2000 IP Configuration

IP address successfully released for adapter "Local Area Connection 1"

C:\>IPCONFIG /RENEW

Windows 2000 IP Configuration

Ethernet adapter Local Area Connection 1:


    Connection-specific DNS Suffix  . : 
    IP Address. . . . . : 192.168.2.125
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.2.254

C:\>
```

4. Type EXIT and press <ENTER> to close the Command Prompt window.

Configuring Your Computer in Windows 2000

1. Access your Network settings by clicking Start, then choose Settings and then select Control Panel.
2. In the Control Panel, locate and double-click the Network and Dial-up Connections icon.
3. Locate and double-click the Local Area Connection icon for the Ethernet adapter that is connected to the Router. When the Status dialog box window opens, click the Properties button.

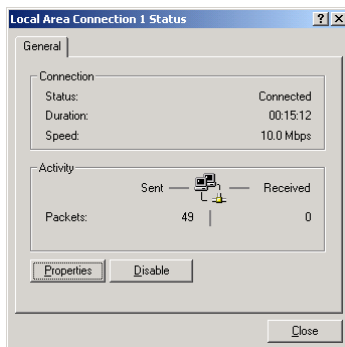

4. In the Local Area Connection Properties box, verify the box next to Internet Protocol (TCP/IP) is checked. Then highlight the Internet Protocol (TCP/IP), and click the Properties button.
5. Select "Obtain an IP address automatically" to configure your computer for DHCP. Click the OK button to save this change and close the Properties window.
6. Click the OK button again to save these new changes.
7. Reboot your PC.
8. To obtain new network settings see "Obtain IP Settings from Your Wireless Barricade g Router" on page 17.


Configuring Your Computer in Windows XP

The following instructions assume you are running Windows XP with the default interface. If you are using the Classic interface (where the icons and menus look like previous Windows versions), please follow the instructions for Windows 2000 outlined above.

1. Access your Network settings by clicking Start, choose Control Panel, select Network and Internet Connections and then click on the Network Connections icon.

Configuring Client TCP/IP

2. Locate and double-click the Local Area Connection icon for the Ethernet adapter that is connected to the Router. Next, click the Properties button.

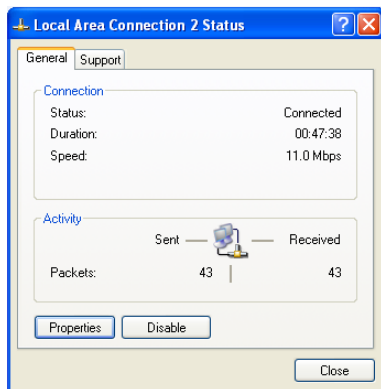

3. In the Local Area Connection Properties box, verify the box next to Internet Protocol (TCP/IP) is checked. Then highlight the Internet Protocol (TCP/IP), and click the Properties button.
4. Select "Obtain an IP address automatically" to configure your computer for DHCP. Click the OK button to save this change and close the Properties window.
5. Click the OK button again to save these new changes.
6. Reboot your PC.


Configuring a Macintosh Computer

You may find that the instructions here do not exactly match your screen. This is because these steps and screenshots were created using Mac OS 10.2. Mac OS 7.x and above are all very similar, but may not be identical to Mac OS 10.2.

1. Pull down the Apple Menu. Click System Preferences and select Network.


Setting Up TCP/IP

2. Make sure that Built-in Ethernet is selected in the Show field.
3. On the TCP/IP tab, select Using DHCP in the Configure field.
4. Close the TCP/IP dialog box.

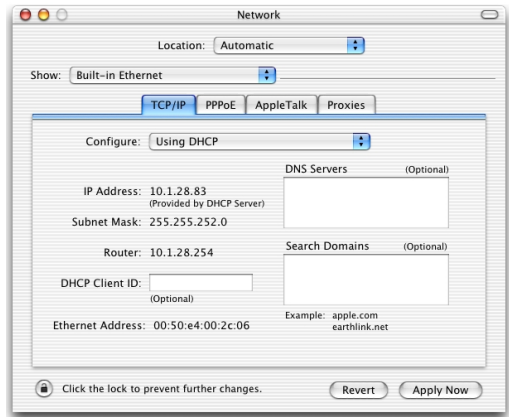


Manual IP Configuration (for all Windows OS)

1. Check Specify an IP address on the IP Address tab. Enter an IP address based on the default network 192.168.2.x (where x is between 2 and 254), and use 255.255.255.0 for the subnet mask.

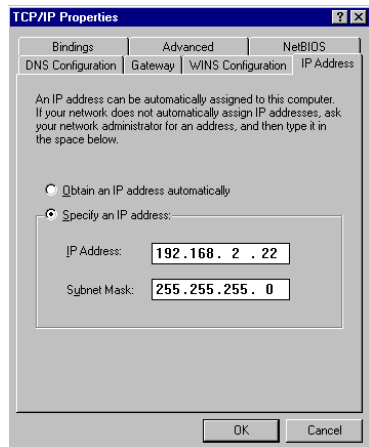


Configuring Client TCP/IP

2. In the Gateway tab, add the IP address of the Router (default: 192.168.2.1) in the New gateway field and click Add.

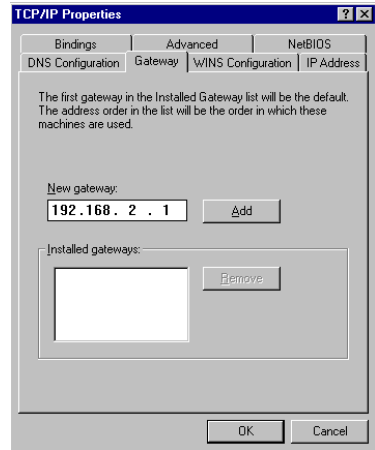

3. On the DNS Configuration tab, add the IP address for the Router and click Add. This automatically relays DNS requests to the DNS server(s) provided by your ISP. Otherwise, add specific DNS servers into the DNS Server Search Order field and click Add.
4. After finishing TCP/IP setup, click OK, and then reboot the computer. After that, set up other PCs on the LAN according to the procedures described above.

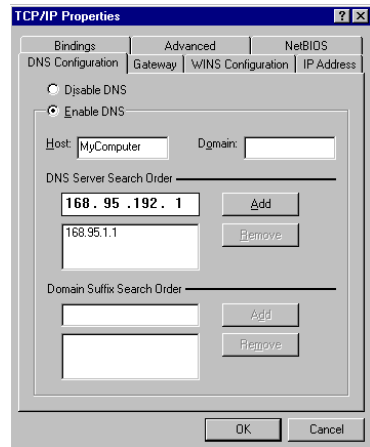

Verifying Your TCP/IP Connection

After installing the TCP/IP communication protocols and configuring an IP address in the same network as the Router, use the Ping command to check if your computer has successfully connected to the Router. The following example shows how the Ping procedure can be executed in an MS-DOS window. First, execute the Ping command:

```
ping 192.168.2.1
```

If a message similar to the following appears:

```
Pinging 192.168.2.1 with 32 bytes of data:  
Reply from 192.168.2.1: bytes=32 time=2ms TTL=64  
a communication link between your computer and the Router has  
been successfully established.
```

If you get the following message,

```
Pinging 192.168.2.1 with 32 bytes of data:  
Request timed out.
```

there may be something wrong in your installation procedure.
Check the following items in sequence:

1. Is the Ethernet cable correctly connected between the Router and the computer?

The LAN LED on the Router and the Link LED of the network card on your computer must be on.

2. Is TCP/IP properly configured on your computer?

If the IP address of the Router is 192.168.2.1, the IP address of your PC must be from 192.168.2.2 - 192.168.2.254 and the default gateway must be 192.168.2.1.

If you can successfully Ping the Router you are now ready to connect to the Internet!

CONFIGURING THE WIRELESS BARRICADE G ROUTER

The Wireless Barricade g Router can be configured by any Java-supported browser, i.e., Internet Explorer 4.0 or above. Using the web management interface, you can configure the Router and view statistics to monitor network activity.

Note: Before you attempt to configure your router, if you have access to the Internet please visit www.smc.com and download the latest firmware update to ensure your Router is running the latest firmware.

Before you attempt to log into the web-based Administration, please verify the following.

1. Your browser is configured properly (see below).
2. Disable any firewall or security software that may be running.
3. Confirm that you have a good link LED where your computer is plugged into the Router. If you don't have a link light, then try another cable until you get a good link.

Browser Configuration

Confirm your browser is configured for a direct connection to the Internet using the Ethernet cable that is installed in the computer. This is configured through the options/preference section of your browser.

Disable Proxy Connection

You will also need to verify that the HTTP Proxy feature of your web browser is disabled. This is so that your web browser will be able to view the Router configuration pages. The following steps are for Internet Explorer and for Netscape. Determine which browser you use and follow the appropriate steps.

Internet Explorer 5 or above (For Windows)


1. Open Internet Explorer. Click Tools, and then select Internet Options.
2. In the Internet Options window, click the Connections tab.
3. Click the LAN Settings button.
4. Clear all the check boxes and click OK to save these LAN settings changes.
5. Click OK again to close the Internet Options window.

Internet Explorer (For Macintosh)

1. Open Internet Explorer. Click Explorer/Preferences.
2. In the Internet Explorer Preferences window, under Network, select Proxies.
3. Uncheck all check boxes and click OK.

Navigating the Web Browser Interface

To access the Router's management interface, enter the Router IP address in your web browser `http://192.168.2.1`. Then click LOGIN.
(By default, there is no password.)

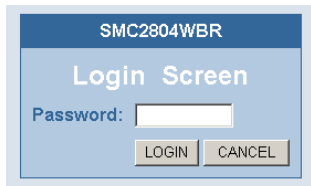

The home page displays the Setup Wizard and Advanced Setup options.



The Router's management interface features a Setup Wizard and an Advanced Setup section. Use the Setup Wizard if you want to quickly set up the Router for use with a cable modem or DSL modem.

Advanced setup supports more advanced functions like hacker attack detection, IP and MAC address filtering, intrusion detection, virtual server setup, virtual DMZ hosts, and other advanced functions.

Making Configuration Changes

Configurable parameters have a dialog box or a drop-down list. Once a configuration change has been made on a page, be sure to click the APPLY or NEXT button at the bottom of the page to enable the new setting.

Note: To ensure proper screen refresh after a command entry, ensure that Internet Explorer 5.0 is configured as follows: Under the menu Tools/Internet Options/General/Temporary Internet Files/Settings, the setting for “Check for newer versions of stored pages” should be “Every visit to the page.”

Setup Wizard

Time Zone

Click on the Setup Wizard picture. The first item in the Setup Wizard is Time Zone setup.



The screenshot shows the SMC Networks Setup Wizard interface. On the left, a sidebar lists three steps: 1. Time Zone (selected with a checkmark), 2. Broadband Type, and 3. IP Address Info. The main content area is titled "1. Time Zone" in red. It contains the following elements:

- A heading: "Set the time zone for the Barricade g. This information is used for log entries and client filtering."
- A "Set Time Zone" section with a dropdown menu currently showing "(GMT-08:00)Pacific Time (US & Canada); Tijuana".
- A "Configure Time Server (NTP):" section with the text: "You can automatically maintain the system time on your SMC Barricade by synchronizing with a public time server over the Internet."
- A checkbox labeled "Enable Automatic Time Server Maintenance" which is checked.
- A note: "When you enable this option you will need to configure two different time servers, use the options below to set the primary and secondary NTP servers in your area:"
- Two input fields for NTP servers:
 - Primary Server: 132.163.4.102 - North America
 - Secondary Server: 192.5.41.41 - North America
- A "NEXT" button in the bottom right corner.

Configuring the Wireless Barricade g Router


For accurate timing of client filtering and log events, you need to set the time zone. Select your time zone from the drop-down list.

Check Enable Automatic Time Server Maintenance to automatically maintain the Router's system time by synchronizing with a public time server over the Internet. Then configure two different time servers by selecting the options in the Primary Server and Secondary Server fields, and click NEXT.

Broadband Type

Select the type of broadband connection you have.

For a cable modem connection see the following page. For a Fixed-IP xDSL connection see "Fixed-IP xDSL" on page 31, for a PPPoE xDSL connection, see "PPPoE" on page 31, and for BigPond connection, see "BigPond" on page 33.

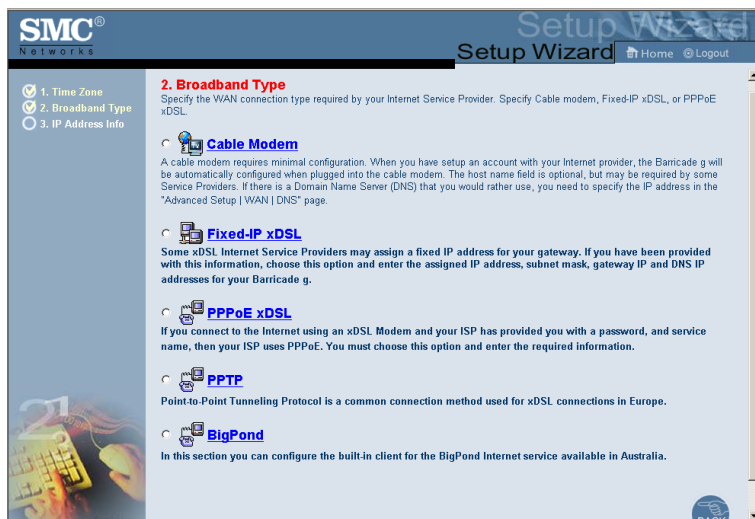


Cable Modem

After selecting Cable Modem as the Broadband Type, a message will appear stating that your data has been successfully saved.

Note: Select Home to return to the home page, then select Advanced Settings/WAN to configure the required parameters. (See “WAN” on page 39.)


Fixed-IP xDSL

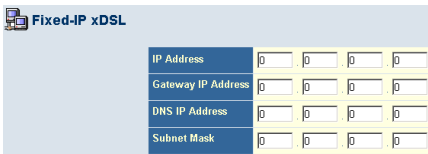

The screenshot shows a configuration window titled "Fixed-IP xDSL". It contains four rows of input fields, each with a label on the left and four numeric input boxes on the right. The labels are "IP Address", "Gateway IP Address", "DNS IP Address", and "Subnet Mask". All numeric input boxes contain the digit "0".

Some xDSL Internet Service Providers may assign a fixed (static) IP address. If you have been provided with this information, choose this option and enter the assigned IP address, gateway IP address, DNS IP addresses, and subnet mask. Click FINISH to complete the setup.

PPPoE

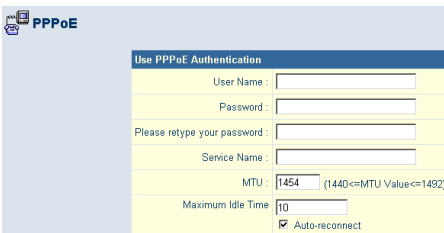

The screenshot shows a configuration window titled "PPPoE". It contains a section titled "Use PPPoE Authentication" with several input fields. The fields are: "User Name" (text input), "Password" (text input), "Please retype your password" (text input), "Service Name" (text input), "MTU" (numeric input with a default value of 1454 and a range of 1440 to 1492), "Maximum Idle Time" (numeric input with a default value of 10), and a checkbox labeled "Auto-reconnect" which is checked.

Enter the PPPoE User Name and Password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers.

Leave the Maximum Transmission Unit (MTU) at the default value (1454) unless you have a particular reason to change it.

Configuring the Wireless Barricade g Router

Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, it will be dropped. (Default: 10)

Enable the Auto-reconnect option to automatically re-establish the connection as soon as you attempt to access the Internet again. Click FINISH to complete the setup.

Point-to-Point Tunneling Protocol (PPTP)

IP Address	0 . 0 . 0 . 0
Subnet Mask	0 . 0 . 0 . 0
Default Gateway	0 . 0 . 0 . 0
User ID	
Password	
PPTP Gateway	0 . 0 . 0 . 0
Idle Time Out	10 (min)
	<input type="radio"/> Manual-connect
	<input checked="" type="radio"/> Auto-connect
	<input type="radio"/> Keep session


Point-to-Point Tunneling Protocol is a common connection method used for xDSL connections in Europe. It can be used to join different physical networks using the Internet as an intermediary.

If you have been provided with the information as shown on the screen, enter the assigned IP address, subnet mask, default gateway IP address, user ID and password, and PPTP Gateway.

Enter a maximum Idle Time Out (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Idle Time Out, it will be dropped. (Default: 10) When the connection is dropped, the re-connecting method can be chosen by clicking on the radio button of Manual-connect, Auto-connect, or Keep session as shown on the screen.

Click FINISH to complete the setup. (Refer to “Point-to-Point Tunneling Protocol (PPTP)” on page 32 for details.)

BigPond

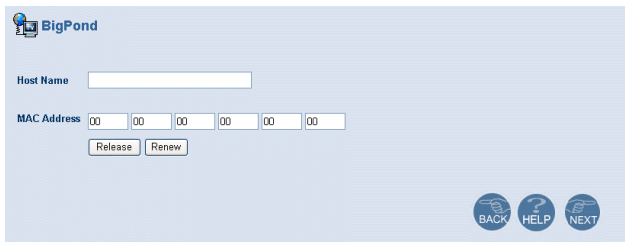The screenshot shows a web interface titled "BigPond" with a light blue background. It features a "Host Name" text input field and a "MAC Address" section with six individual input boxes, each containing "00". Below the MAC address boxes are "Release" and "Renew" buttons. In the bottom right corner, there are three circular buttons labeled "BACK", "HELP", and "NEXT".

If you use the BigPond Internet Service which is available in Australia, enter the the host name and AMC address for BigPond authentication. Click FINISH to complete the setup.

Advanced Setup

Use the web management interface to define system parameters, manage and control the Router and its ports, or monitor network conditions. The following table outlines the selections available from this program.


Menu	Description
System	Sets the local time zone, the password for administrator access, and the IP address of a PC that will be allowed to manage the Router remotely.
WAN	Specifies the Internet connection type: <ul style="list-style-type: none">• Dynamic IP host configuration and the physical MAC address of each media interface• PPPoE configuration• PPTP configuration• Static IP and ISP gateway address• BigPond (Internet service available in Australia)• Specifies DNS servers to use for domain name resolution.
LAN	Sets the TCP/IP configuration of the Router's LAN interface and all DHCP clients.

Configuring the Wireless Barricade g Router

Menu	Description
NAT	Shares a single ISP account with multiple users, sets up virtual servers.
Wireless	Configures the radio frequency, SSID, encryption, and 802.1x for wireless communications.
Firewall	Configures a variety of security and specialized functions, including: Access Control, Hacker Prevention, and DMZ.
DDNS	Dynamic DNS provides users on the Internet with a method to tie their domain name to a computer or server.
UPnP	With Universal Plug and Play, a device can automatically and dynamically join a network, obtain an IP address, communicate its capabilities, and learn about the presence and capabilities of other devices. Devices can then directly communicate with each other. This further enables peer-to-peer networking.
Tools	Contains options to back up & restore the current configuration, restore all configuration settings to the factory defaults, update system firmware, or reset the system.
Status	<p>Provides WAN connection type and status, firmware and hardware version numbers, system IP settings, as well as DHCP, NAT, and Firewall information.</p> <p>Displays the number of attached clients, the firmware versions, the physical MAC address for each media interface, and the hardware version and serial number.</p> <p>Shows the security and DHCP client log.</p>

System

Time Zone

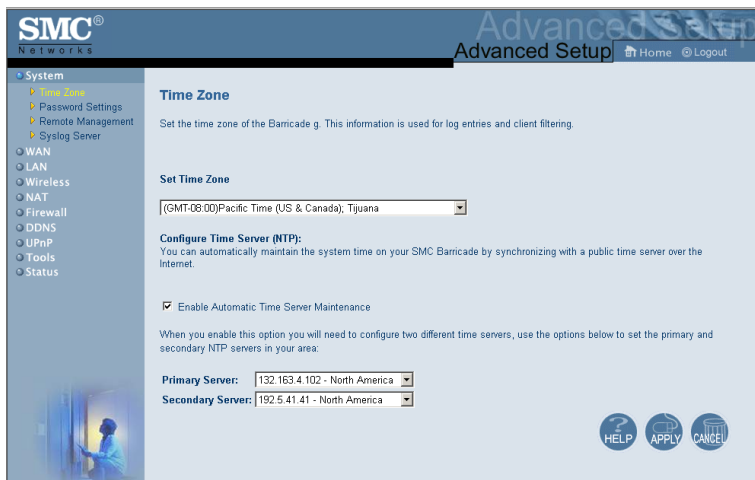

SMC®
Networks

Advanced Setup Home Logout

System

- Time Zone
- Password Settings
- Remote Management
- Syslog Server

WAN

LAN

Wireless

NAT

Firewall

DDNS

UPnP

Tools

Status

Time Zone

Set the time zone of the Barricade g. This information is used for log entries and client filtering.

Set Time Zone

(GMT-08:00)Pacific Time (US & Canada); Tijuana

Configure Time Server (NTP):
You can automatically maintain the system time on your SMC Barricade by synchronizing with a public time server over the Internet.

☒ Enable Automatic Time Server Maintenance

When you enable this option you will need to configure two different time servers, use the options below to set the primary and secondary NTP servers in your area:

Primary Server: 132.163.4.102 - North America

Secondary Server: 192.5.41.41 - North America

HELP APPLY CANCEL

Set the time zone and time server for the Router. This information is used for log entries and client access control.

Check Enable Automatic Time Server Maintenance to automatically maintain the Router's system time by synchronizing with a public time server over the Internet. Then configure two different time servers by selecting the options in the Primary Server and Secondary Server fields.

Configuring the Wireless Barricade g Router

Password Settings

SMC[®]
Networks

Advanced Setup

Home Logout

System

- Time Zone
- Password Settings**
- Remote Management
- Syslog Server

WAN

- LAN
- Wireless
- NAT
- Firewall
- DDNS
- UPnP
- Tools
- Status

Password Settings

Set a password to restrict management access to the Barricade g.

- Current Password :
- New Password:
- Re-Enter Password for Verification:

- Idle Time Out: Min
(Idle Time =0 : NO Time Out)

HELP

APPLY

CANCEL


Use this menu to restrict access based on a password. By default, there is no password. For security you should assign one before exposing the Router to the Internet.

Passwords can contain from 3–12 alphanumeric characters and are not case sensitive.

Note: If your password is lost, or you cannot gain access to the user interface, press the Reset button on the rear panel (holding it down for at least five seconds) to restore the factory defaults. (The default is no password.)

Enter a maximum Idle Time Out (in minutes) to define a maximum period of time for which the login session is maintained during inactivity. If the connection is inactive for longer than the maximum idle time, it will perform system logout, and you have to log into the web management system again.
(Default: 10 minutes)

Remote Management

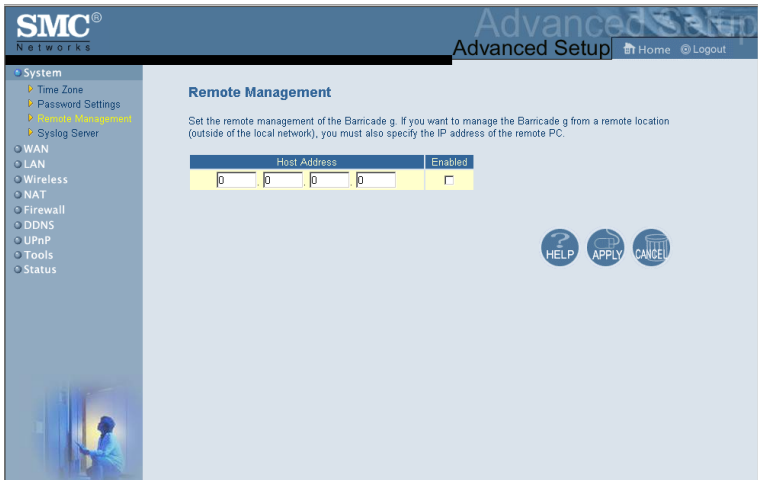

Remote Management allows a remote PC to configure, manage, and monitor the Router using a standard web browser. Check Enable and enter the IP address of the remote host. Click APPLY.

Note: If you specify 0.0.0.0 as this IP address, any host can manage the Router.

Configuring the Wireless Barricade g Router

Syslog Server

SMC[®]
Networks

Advanced Setup

Home Logout

System

- Time Zone
- Password Settings
- Remote Management
- Syslog Server**

- WAN
- LAN
- Wireless
- NAT
- Firewall
- DDNS
- UPnP
- Tools
- Status

Syslog Server

Using third party syslog software, this Syslog Server tool will automatically download the Barricade log to the server IP address specified below.

Server LAN IP Address				Enabled
<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>

HELP

APPLY

CANCEL

The Syslog Server downloads the Router’s log file to the server’s IP address specified on this screen. (Default: disabled)

WAN

Specify the WAN connection type provided by your Internet Service Provider, then click More Configuration to enter detailed configuration parameters for the selected connection type.

Dynamic IP

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with categories: System, WAN, LAN, Wireless, NAT, Firewall, DDNS, UPnP, Tools, and Status. Under the WAN category, options include Dynamic IP (selected), PPPoE, PPTP, Static IP, BigPond, and DNS. The main content area is titled 'Dynamic IP' and contains the following text: 'The Host name is optional, but may be required by some Service Provider's. The default MAC address is set to the WAN's physical interface on the Barricade g.' Below this, it states: 'If required by your Service Provider, you can use the "Clone MAC Address" button to copy the MAC address of the Network Interface Card installed in your PC to replace the WAN MAC address.' At the bottom of the text block, it says: 'If necessary, you can use the "Release" and "Renew" buttons on the Status page to release and renew the WAN IP address.' The configuration fields include a 'Host Name' text box, a 'MAC Address' field with a dropdown menu currently showing '00 - E0 - C9 - BF - 69 - F0', and a 'Clone MAC Address' button. At the bottom right of the form are three circular buttons: HELP, APPLY, and CANCEL.

The Host Name is optional, but may be required by some ISPs. The default MAC address is set to the WAN's physical interface on the Router. Use this address when registering for Internet service, and do not change it unless required by your ISP. If your ISP used the MAC address of an Ethernet card as an identifier when first setting up your broadband account, only connect the PC with the registered MAC address to the Router and click the Clone MAC Address button. This will replace the current Router MAC address with the already registered Ethernet card MAC address.

Configuring the Wireless Barricade g Router

If you are unsure of which PC was originally set up by the broadband technician, call your ISP and request that they register a new MAC address for your account. Register the default MAC address of the Router.

Point-to-Point Over Ethernet (PPPoE)

The screenshot shows the 'Advanced Setup' window for an SMC Networks router. The left sidebar contains a navigation menu with options: System, WAN (selected), Dynamic IP, PPTP, Static IP, BigPond, DNS, LAN, Wireless, NAT, Firewall, DDNS, UPnP, Tools, and Status. The main content area is titled 'PPPoE' and contains the following text: 'Enter the PPPoE user name and password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers. Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, then it will be dropped. You can enable the Auto-reconnect option to automatically re-establish the connection as soon as you attempt to access the Internet again.' Below this text is a note: 'If your Internet Service Provider requires the use of PPPoE, enter the information below.' The configuration form is titled 'Use PPPoE Authentication' and includes the following fields: 'User Name' (text input), 'Password' (password input), 'Please retype your password' (password input), 'Service Name' (text input), 'MTU' (set to 1454, with a note '(1440 <= MTU Value <= 1492)'), and 'Maximum Idle Time' (set to 10). There is a checkbox for 'Auto-reconnect' which is checked. At the bottom right of the window are three buttons: 'HELP', 'APPLY', and 'CANCEL'.

SMC® Networks Advanced Setup Home Logout

System
WAN
Dynamic IP
PPTP
Static IP
BigPond
DNS
LAN
Wireless
NAT
Firewall
DDNS
UPnP
Tools
Status

PPPoE

Enter the PPPoE user name and password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers. Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, then it will be dropped. You can enable the Auto-reconnect option to automatically re-establish the connection as soon as you attempt to access the Internet again.

If your Internet Service Provider requires the use of PPPoE, enter the information below.

Use PPPoE Authentication

User Name :

Password :

Please retype your password :

Service Name :

MTU : 1454 (1440 <= MTU Value <= 1492)

Maximum Idle Time : 10

☒ Auto-reconnect

HELP APPLY CANCEL

Enter the PPPoE User Name and Password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers.

The MTU (Maximum Transmission Unit) governs the maximum size of the data packets. Leave this on the default value (1454) unless you have a particular reason to change it.

Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, it will be dropped. (Default: 10 minutes)

Enable the Auto-reconnect option to automatically re-establish the connection as soon as you attempt to access the Internet again.

Point-to-Point Tunneling Protocol (PPTP)

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: System, WAN (selected), Dynamic IP, PPPoE, Static IP, BigPond, DNS, LAN, Wireless, NAT, Firewall, DDNS, UPnP, Tools, and Status. The main content area is titled 'PPTP' and includes a description: 'Point-to-Point Tunneling Protocol is a common connection method used for xDSL connections in Europe.' Below this is a form with the following fields: IP Address (0.0.0.0), Subnet Mask (0.0.0.0), Default Gateway (0.0.0.0), User ID (empty), Password (empty), PPTP Gateway (0.0.0.0), and Idle Time Out (10 min). A red note at the bottom states: '* If you have an ISP that charges by the time, change your idle time out value to 1 minute.' At the bottom right are three buttons: HELP, APPLY, and CANCEL.

Point-to-Point Tunneling Protocol (PPTP) can be used to join different physical networks using the Internet as an intermediary. Using the above screen allows client PCs to establish a normal PPTP session and provides hassle-free configuration of the PPTP client on each client PC.

Enter the assigned IP address, subnet mask and default gateway IP address (usually supplied by your ISP), and then the PPTP User ID, Password and PPPTP Gateway IP address.

Configuring the Wireless Barricade g Router

Enter a maximum Idle Time Out (in minutes) to define a maximum period of time for which the PPTP connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, it will be dropped.
(Default: 10 minutes)

Static IP Address

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with categories: System, WAN, LAN, Wireless, NAT, Firewall, DDNS, UPnP, Tools, and Status. The WAN section is expanded, showing options like Dynamic IP, PPPoE, PPTP, Static IP (which is highlighted), BigPond, and DNS. The main content area is titled 'Static IP' and contains the following text: 'If your Service Provider has assigned a fixed IP address, enter the assigned IP address, subnet mask and the gateway address provided.' and 'Has your Service Provider given you an IP address and Gateway address?'. Below this text are three input fields, each with a blue header bar: 'IP address assigned by your Service Provider', 'Subnet Mask', and 'Service Provider Gateway Address'. Each field consists of four numeric input boxes. At the bottom right of the main content area are three circular buttons: 'HELP', 'APPLY', and 'CANCEL'. The top of the page features the SMC Networks logo, the title 'Advanced Setup', and links for 'Home' and 'Logout'.

If your Internet Service Provider has assigned a fixed IP address, enter the assigned address and subnet mask for the Router, then enter the gateway address of your ISP.

You may need a fixed address if you want to provide Internet services, such as a web server or FTP server.

BigPond

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: System, WAN (selected), Dynamic IP, PPPoE, PPTP, Static IP, BigPond (highlighted), DNS, LAN, Wireless, NAT, Firewall, DDNS, UPnP, Tools, and Status. The main content area is titled 'BigPond' and contains the text: 'In this section you can configure the built-in client for the BigPond Internet service available in Australia.' Below this text are two configuration fields: 'Host Name' with a text input box, and 'MAC Address' with six numeric input boxes (each containing '00'). Under the MAC Address boxes are two buttons: 'Release' and 'Renew'. At the bottom right of the main area are three circular buttons: 'HELP', 'APPLY', and 'CANCEL'. The top of the page features the SMC Networks logo and the title 'Advanced Setup' with links for 'Home' and 'Logout'.

BigPond is a service provider in Australia that uses a heartbeat system to maintain the Internet connection. Configure the host name and MAC address to get online. Click on Release to clear the MAC address and the Renew button to assign a new MAC address.

Configuring the Wireless Barricade g Router

DNS

SMC®
Networks

Advanced Setup

Home Logout

System

WAN

Dynamic IP

PPPoE

PPtP

Static IP

BigPond

LAN

Wireless

NAT

Firewall

DDNS

UPnP

Tools

Status

DNS

A Domain Name Server (DNS) is an index of IP addresses and Web addresses. If you type a Web address into your browser, such as www.smc.com, a DNS server will find that name in its index and find the matching IP address: 202.42.118.222. Most ISPs provide a DNS server for speed and convenience. Since your Service Provider may connect to the Internet with dynamic IP settings, it is likely that the DNS server IP's are also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP address here.

Domain Name Server (DNS) Address :

Secondary DNS Address (optional) :

HELP

APPLY

CANCEL

Domain Name Servers map numerical IP addresses to the equivalent domain name (e.g., www.smc.com). Your ISP should provide the IP address of one or more domain name servers. Enter those addresses in this screen.

LAN

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: System, WAN, LAN, Wireless, NAT, Firewall, DDNS, UPnP, Tools, and Status. The 'LAN' option is selected. The main content area is titled 'LAN Settings' and includes a sub-header 'LAN IP'. Below this, there is a descriptive text: 'You can enable DHCP to dynamically allocate IP addresses to your client PCs, or configure filtering functions based on specific clients or protocols. The Baricade g must have an IP address for the local network.' The configuration fields are as follows:

IP Address	192 . 168 . 2 . 1
IP Subnet Mask	255.255.255.0
DHCP Server	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Lease Time	One Week

Below these fields is the 'IP Address Pool' section with the following configuration:


Start IP	192 . 168 . 2 . 100
End IP	192 . 168 . 2 . 199
Domain Name	

- **LAN IP** – Use the LAN menu to configure the LAN IP address for the Router and to enable the DHCP server for dynamic client address allocation.
- Set a period for the lease time if required. For home networks this may be set to Forever, which means there is no time limit on the IP address lease.
- **IP Address Pool** – A dynamic IP address range may be specified (192.168.2.2–254). IP addresses running from 192.168.2.100 to 192.168.2.199 are the default value. Once the IP addresses, e.g. 192.168.2.100–199, have been assigned, these IP addresses will be part of the dynamic IP address pool. IP addresses from 192.168.2.2 to 192.168.2.99, and 192.168.2.200 to 192.168.2.254 will be available as static IP addresses.

Remember not to include the address of the Router in the client address pool. Also remember to configure your client PCs for dynamic IP address allocation.

Configuring the Wireless Barricade g Router

Wireless

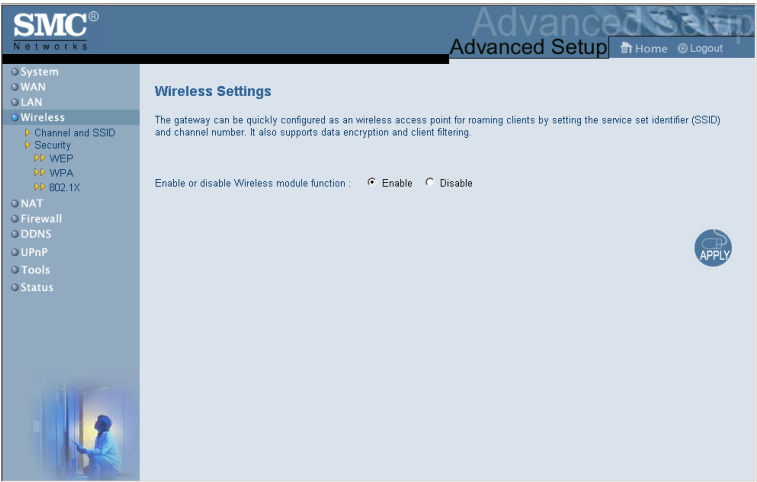

To configure the Router as a wireless access point for wireless clients (either stationary or roaming), all you need to do is define the radio channel, the Service Set identifier (SSID), and security options.

Channel and SSID

SMC® Networks Advanced Setup | Home | Logout

- System
- WAN
- LAN
- Wireless**
 - Wireless Setup
 - Security
 - WEP
 - WPA
 - 802.1X
- NAT
- Firewall
- DDNS
- UPnP
- Tools
- Status

Channel and SSID

This page allows you to define SSID, Transmission Rate, Basic Rate and Channel ID for wireless connection. In the wireless environment, the Barmcade g can also act as an wireless access point. These parameters are used for the mobile stations to connect to this access point.

ESSID	SMC
ESSID Broadcast	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE
Wireless Mode	Mixed (11b+11g)
transmission Rate	Fully Automatic
Channel	6
g Nitro	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE

HELP APPLY CANCEL

You must specify a common radio channel and SSID (Service Set ID) to be used by the Router and all of your wireless clients. Be sure you configure all of your clients to the same values.

ESSID: The Service Set ID. This should be set to the same value as the other wireless devices in your network.

ESSID Broadcast: Broadcasting the SSID on the wireless network for easy connection with client PCs. For security reason, disable SSID broadcast. (Default: Enable)


Note: The SSID is case sensitive and can consist of up to 32 alphanumeric characters.

Wireless Mode: Set the communication mode for the Router. Default: Mixed (11b+11g)

Mixed (11b+11g)
Mixed (11b+11g)
Long Range Mixed (11b+11g)
11g Only
11b Only


Configuring the Wireless Barricade g Router

Transmission Rate: Set the rate of data transmitted from the Router. The lower the data rate, the longer the transmission distance. (Default: Fully Automatic.)

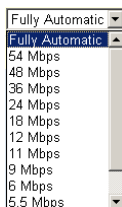

Channel: The radio channel through which the Router communicates with PCs in its BSS. (Default: 6)

Note: The available channel settings are limited by local regulations.

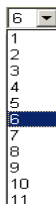

g Nitro: In a crowded 2.4 MHz frequency, the connection speed is much lower than the promised 54 Mbps. The g Nitro implemented by Intersil's Prism Nitro technology dramatically enhances your wireless network speeds. It provides up to 50% more throughput in 11g only environment, and improves network throughput by 3 times in mixed mode.

Security

SMC® Networks Advanced Setup | Home | Logout

- System
- WAN
- LAN
- Wireless**
 - Channel and SSID
 - Security
 - WEP
 - WPA
 - 802.1X
- NAT
- Firewall
- DDNS
- UPnP
- Tools
- Status

Security

The Barricade g can transmit your data securely over the wireless network. Matching security mechanisms must be setup on your Barricade g and wireless client devices. You can choose the allowed security mechanisms in this page and configure them in the sub-pages.

Allowed Client Type:

- No Security
- WEP Only
- WEP / WPA
- WPA Only

HELP APPLY CANCEL

If you are transmitting sensitive data across radio channels, you should enable wireless security.

Configuring the Wireless Barricade g Router

Wired Equivalent Privacy (WEP)

The screenshot shows the SMC Networks Advanced Setup web interface. The left sidebar contains a navigation menu with options: System, WAN, LAN, Wireless (selected), NAT, Firewall, DDNS, UPnP, Tools, and Status. The 'Wireless' section is expanded, showing sub-options: Channel and SSID, Security (selected), WEP, WPA, and 802.1X. The main content area is titled 'WEP' and includes a descriptive paragraph: 'WEP is the basic mechanism to transmit your data securely over the wireless network. Matching encryption keys must be setup on your Barricade g and wireless client devices to use WEP.' Below this, there are two configuration sections. The first section, 'WEP Mode', has radio buttons for '64-bit' (selected) and '128-bit'. The second section, 'Key Provisioning', has radio buttons for 'Static' (selected) and 'Dynamic'. The third section, 'Static WEP Key Setting', contains a 'Default Key ID' dropdown menu set to '1', a 'Passphrase' field with a checkmark icon and the text '(1~32 characters)', and four rows for 'Key 1' through 'Key 4'. Each key row has a text input field and a note '(10/26 hex digits for 64-WEP/128-WEP)'. A 'Clear' button is located at the bottom right of the key settings. At the bottom of the interface are three circular buttons: 'HELP', 'APPLY', and 'CANCEL'.

WEP encryption requires you to use the same set of encryption/decryption keys for the Router and all of your wireless clients.

WEP mode: You can choose between the 64-bit or the 128-bit encryption.

Key Provisioning: Select a key type of static key or dynamic key.

Static WEP Key Setting

You may manually enter the keys or automatically generate encryption keys. To manually configure the keys, enter 10 digits for each 64-bit key, or enter 26 digits for the single 128-bit key. (A hexadecimal digit is a number or letter in the range 0-9 or A-F.) For automatic 64-bit security, check the box of Passphrase, enter a passphrase and click APPLY. Four keys will be generated. Choose a key ID (1-4) from the drop-down list or accept the default key.

If you use encryption, configure the same keys used for the Router on each of your wireless clients. Note that Wired Equivalent Privacy (WEP) protects data transmitted between wireless nodes, but does not protect any transmissions over your wired network or over the Internet.

Wi-Fi Protected Access (WPA)

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: System, WAN, LAN, Wireless (selected), NAT, Firewall, DDNS, UPnP, Tools, and Status. The Wireless menu is expanded, showing sub-options: Channel and SSID, Security, WEP, WPA (selected), and 802.1X. The main content area is titled 'WPA' and contains a descriptive paragraph: 'WPA is a security enhancement that strongly increases the level of data protection and access control for existing wireless LAN. Matching authentication and encryption methods must be setup on your Barricade g and wireless client devices to use WPA.' Below this is a configuration form with the following fields: 'Cypher suite' (a dropdown menu showing 'TKIP'), 'Authentication' (radio buttons for '802.1X' and 'Pre-shared Key', with 'Pre-shared Key' selected), 'Pre-shared key type' (radio buttons for 'Passphrase (8-63 characters)' and 'Hex (64 digits)', with 'Passphrase' selected), 'Pre-shared Key' (a text input field), and 'Group Key Re-Keying' (radio buttons for 'Per 3600 Seconds', 'Per 1000 K Packets', and 'Disable', with 'Per 3600 Seconds' selected). At the bottom right of the form are three circular buttons: 'HELP', 'APPLY', and 'CANCEL'.

WPA combines Temporal Key Integrity Protocol (TKIP) and 802.1x mechanisms. It provides dynamic key encryption and 802.1x authentication service. With TKIP, WPA uses 48-bit initialization vectors, calculates an 8-byte message integrity code, and generates an encryption key periodically. For authentication, it allows you to use 802.1x authentication for an environment with a RADIUS server installed on your network. Selecting the Pre-shared Key enables WPA to use the pre-shared key in a SOHO network.

Configuring the Wireless Barricade g Router

Field	Default Parameter	Description
Cypher suite	TKIP	One of the security mechanism used by WPA for frame body and CRC frame encryption
Authentication	802.1X	Select the authentication mode. <ul style="list-style-type: none">• 802.1X: It is for an enterprise network with a RADIUS server installed.• Pre-shared Key: It is for a SOHO network without any authentication server installed.
Pre-shared key type	Passphrase (8~63 characters)	Select the key type as in pass-phrase or in 64-Hex characters
Pre-shared Key	none	Specify in pass-phrase style or in 64-Hex characters.
Group Key Re_Keying	Disable	The period of renewing broadcast/multicast key

802.1X

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: System, WAN, LAN, Wireless (selected), NAT, Firewall, DDNS, UPnP, Tools, and Status. The 'Wireless' section is expanded, showing sub-options: Channel and SSID, Security, WEP, WPA, and 802.1X (selected). The main content area is titled '802.1X' and contains the following configuration fields:

- 802.1X Authentication:** Radio buttons for 'Enable' (selected) and 'Disable'.
- Session Idle Timeout:** A text box with '300' and the label 'Seconds (0 for no timeout checking)'.
- Re-Authentication Period:** A text box with '3600' and the label 'Seconds (0 for no re-authentication)'.
- Quiet Period:** A text box with '60' and the label 'Seconds after authentication failed'.
- Server Type:** A dropdown menu set to 'RADIUS'.
- RADIUS Server Parameters:**
 - Server IP:** A text box with '192', a dropdown for '168', a text box with '1', and a dropdown for '1'.
 - Server Port:** A text box with '1812'.
 - Secret Key:** An empty text box.
 - NAS-ID:** An empty text box.

Management access will be checked against the authentication database stored on the Router. If an authentication RADIUS server is used, you must specify the secret key of the

Message-Authenticator attribute, i.e., Message Digest-5 (MD5), and the corresponding parameters in the RADIUS Server Parameters field for the remote authentication protocol.

- General Parameters

Field	Default Parameter	Description
Enable 802.1X	Yes	Starts using 802.1x security control.
Session Idle Timeout	300 seconds	Defines a maximum period of time for which the connection is maintained during inactivity.
Re-Authentication Period	3600 seconds	Defines a maximum period of time for which the RADIUS server will dynamically re-assign a session key to a connected client station.
Quiet Period	60 seconds	Defines a maximum period of time for which the Router will wait between failed authentications.
Server Type	RADIUS	Selects the authentication server type.

- RADIUS Server Parameters

Field	Defaults	Description
Server IP	192.168.1.1	The IP address of the RADIUS server.
Server Port	1812	UDP port is used for RADIUS authentication messages.
Secret Key	none	Defines a text string on both the RADIUS client and server to secure RADIUS traffic. The RADIUS server requires MD5 Message-Authenticator attribute for all access request messages. The 802.1x authentication scheme is supported by using the Extensible Authentication Protocol (EAP) over the RADIUS server.
NAS-ID	none	Defines the request identifier of the Network Access Server (NAS)

Configuring the Wireless Barricade g Router

NAT - Network Address Translation

From this section you can configure the Address Mapping, Virtual Server, and Special Application features that provide control over the TCP/UDP port openings in the router's firewall. This section can be used to support several Internet based applications such as web, E-mail, FTP, and Telnet

Address Mapping

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: System, WAN, LAN, Wireless, NAT (selected), Virtual Server, Special Applications, Firewall, DDNS, UPnP, Tools, and Status. The main content area is titled 'Address Mapping' and includes a descriptive paragraph about NAT. Below this is a table with 6 rows for configuring address mappings. Each row contains a 'Global IP' field, a description 'is transformed as multiple virtual IPs', and a range of 'from' and 'to' internal IP addresses. The first five rows have default values of 192.168.2.0 for both the global IP and the internal IP range. The sixth row has default values of 192.168.2.0 for the global IP and 192.168.2.0 for the internal IP range.

Address Mapping		
1. Global IP: 192.168.2.0	is transformed as multiple virtual IPs	from 192.168.2.0 to 192.168.2.0
2. Global IP: 192.168.2.0	is transformed as multiple virtual IPs	from 192.168.2.0 to 192.168.2.0
3. Global IP: 192.168.2.0	is transformed as multiple virtual IPs	from 192.168.2.0 to 192.168.2.0
4. Global IP: 192.168.2.0	is transformed as multiple virtual IPs	from 192.168.2.0 to 192.168.2.0
5. Global IP: 192.168.2.0	is transformed as multiple virtual IPs	from 192.168.2.0 to 192.168.2.0
6. Global IP: 192.168.2.0	is transformed as multiple virtual IPs	from 192.168.2.0 to 192.168.2.0

Allows one or more public IP addresses to be shared by multiple internal users. Enter the Public IP address you wish to share into the Global IP field. Enter a range of internal IPs that will share the global IP.

Virtual Server

Virtual Server

You can configure the Barricade g as a virtual server so that remote users accessing services such as the Web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port number), the Barricade g redirects the external service request to the appropriate server (located at another internal IP address). This tool can support both port ranges, multiple ports, and combinations of the two.

For example:

- Port Ranges: ex. 100-150
- Multiple Ports: ex. 25,110,80
- Combination: ex. 25-100,80

No.	LAN IP Address	Protocol Type	LAN Port	Public Port	Enable		
1	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean
2	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean
3	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean
4	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean
5	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean
6	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean
7	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean
8	192.168.2.	TCP			<input type="checkbox"/>	Add	Clean

If you configure the Router as a virtual server, remote users accessing services such as web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port number), the Router redirects the external service request to the appropriate server (located at another internal IP address).

For example, if you set Type/Public Port to TCP/80 (HTTP or web) and the Private IP/Port to 192.168.2.2/80, then all HTTP requests from outside users will be transferred to 192.168.2.2 on port 80. Therefore, by just entering the IP Address provided by the ISP, Internet users can access the service they need at the local address to which you redirect them.

The more common TCP service ports include:
 HTTP: 80, FTP: 21, Telnet: 23, and POP3: 110

Configuring the Wireless Barricade g Router

Special Applications

Some applications, such as Internet gaming, videoconferencing, Internet telephony and others, require multiple connections. These applications cannot work with Network Address Translation (NAT) enabled. If you need to run applications that require multiple connections, use the following screen to specify the additional public ports to be opened for each application.

The screenshot shows the 'Special Applications' configuration page in the SMC Networks Advanced Setup interface. The left sidebar contains a navigation menu with options: System, WAN, LAN, Wireless, NAT (selected), Address Mapping, Virtual Server, Firewall, DDNS, UPnP, Tools, and Status. The main content area is titled 'Special Applications' and includes a descriptive paragraph about applications requiring multiple connections. Below the text is a table with 6 rows for configuring applications. Each row has fields for 'Trigger Port', 'Trigger Type' (TCP or UDP), 'Public Port', 'Public Type' (TCP or UDP), and an 'Enabled' checkbox. A note specifies that the range of Trigger Ports is from 1 to 65535.

	Trigger Port	Trigger Type	Public Port	Public Type	Enabled
1.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
2.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
3.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
4.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
5.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
6.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>

Specify the public port number normally associated with an application in the Trigger Port field. Set the protocol type to TCP or UDP, then enter the ports that the application requires.

Popular applications requiring multiple ports are listed in the Popular Applications field. From the drop-down list, choose the application and then choose a row number to copy this data into.

The screenshot shows a dropdown menu titled 'Popular applications'. The menu is open, displaying a list of applications: Battle.net, Dialpad, ICU II, MSN Gaming Zone, PC-to-Phone, and Quick Time 4. To the right of the dropdown is a 'Copy to' field and two buttons labeled 'HELP' and 'APPLY'.

Note: Choosing a row that already contains data will overwrite the current settings.

Example:

ID	Trigger Port	Trigger Type	Public Port	Public Type	Comment
1	6112	UDP	6112	UDP	Battle.net
2	28800	TCP	2300-2400, 47624	TCP	MSN Game Zone

For a full list of ports and the services that run on them, see www.iana.org/assignments/port-numbers.

Firewall

The Router firewall can provide access control of connected client PCs, block common hacker attacks, including IP Spoofing, Land Attack, Ping of Death, IP with zero length, Smurf Attack, UDP port loopback, Snork Attack, TCP null scan, and TCP SYN flooding. The firewall does not significantly affect system performance, so we advise leaving it enabled to protect your network users.

Configuring the Wireless Barricade g Router

Access Control

SMC[®]
Networks

Advanced Setup

Home Logout

System

WAN

LAN

Wireless

NAT

Firewall

- Access Control
- MAC Filter
- URL Blocking
- Schedule Rule
- Intrusion Detection
- DMZ

DDNS

UPnP

Tools

Status

Access Control

Access Control allows users to define the traffic type permitted or not-permitted to WAN port service. This page includes IP address filtering and MAC address filtering.

Enable Filtering Function : ☐ Yes ☒ No

Normal Filtering Table (up to 10 computers)

Client PC Description	Client PC IP Address	Client Service	Schedule Rule	Configure
Normal	192.168.2.101 ~ 125	WWW, WWW with URL Blocking, FTP, AIM	Always Blocking	Edit Delete

[Add PC](#)

HELP

APPLY

CANCEL

Using this option allows you to specify different privileges based on IP address for the client PCs.

Note: Click on Add PC and define the appropriate settings for client PC services (as shown in the following screen).

System

WAN

LAN

Wireless

NAT

Firewall

Access Control

MAC Filter

URL Blocking

Schedule Rule

Intrusion Detection

DMZ

DDNS

UPnP

Tools

Status

Advanced Setup

Home Logout

Access Control Add PC

This page allows users to define service limitations of client PCs, including IP address, service type and scheduling rule criteria. For the URL blocking function, you need to configure the URL address first on the "URL Blocking Site" page. For the scheduling function, you also need to configure the schedule rule first on the "Schedule Rule" page.

- Client PC Description:
- Client PC IP Address: 192.168.2. ~
- Client PC Services:

Service Name	Detail Description	Blocking
WWW	HTTP, TCP Port 80, 3128, 8000, 8090, 8001	<input checked="" type="checkbox"/>
WWW with URL Blocking	HTTP (Ref. URL Blocking Site Page)	<input checked="" type="checkbox"/>
E-mail Sending	SMTP, TCP Port 25	<input type="checkbox"/>
News Forums	NNTP, TCP Port 119	<input type="checkbox"/>
E-mail Receiving	POP3, TCP Port 110	<input type="checkbox"/>
Secure HTTP	HTTPS, TCP Port 443	<input type="checkbox"/>
File Transfer	FTP, TCP Port 21	<input checked="" type="checkbox"/>
MSN Messenger	TCP Port 1863	<input type="checkbox"/>
Telnet Service	TCP Port 23	<input type="checkbox"/>
AIM	AOL Instant Messenger, TCP Port 5190	<input checked="" type="checkbox"/>
NetMeeting	H.323, TCP Port 1720	<input type="checkbox"/>
DNS	UDP Port 53	<input type="checkbox"/>
SNMP	UDP Port 161, 162	<input type="checkbox"/>
VPN-PPTP	TCP Port 1723	<input type="checkbox"/>
VPN-L2TP	UDP Port 1701	<input type="checkbox"/>
TCP	All TCP Port	<input type="checkbox"/>
UDP	All UDP Port	<input type="checkbox"/>

User Define Service

Protocol: ☐ TCP ☐ UDP
Port Range: - , - , - , - , -

- Scheduling Rule (Ref. Schedule Rule Page):

OK

Cancel

Configuring the Wireless Barricade g Router

MAC Filtering Table

SMC®
Networks

Advanced Setup

Home Logout

System

WAN

LAN

Wireless

NAT

Firewall

- Access Control
- MAC Filter
- URL Blocking
- Schedule Rule
- Intrusion Detection
- DMZ

DDNS

UPnP

Tools

Status

MAC Filtering Table

This section helps provides MAC Filter configuration. When enabled, only MAC addresses configured will have access to your network. All other client devices will get denied access. This security feature can support up to 32 devices and applies to clients.

MAC Address Control :

☐ Yes ☒ No

MAC Filtering Table (up to 32 computers)

ID	MAC Address										
1	00	:	E0	:	29	:	8F	:	69	:	F0
2		:		:		:		:		:	
3		:		:		:		:		:	
4		:		:		:		:		:	
5		:		:		:		:		:	
6		:		:		:		:		:	
7		:		:		:		:		:	
8		:		:		:		:		:	
9		:		:		:		:		:	
10		:		:		:		:		:	
11		:		:		:		:		:	
12		:		:		:		:		:	


The MAC Filtering feature of the Router allows you to control access to your network for up to 32 clients based on the MAC (Media Access Control) Address of the client machine. This ID is unique to each network adapter. If the MAC address is listed in the table, that client machine will have access to the network.

URL Blocking

To configure the URL Blocking feature, use the table below to specify the web sites (www.somesite.com) and/or keywords you want to filter on your network.

To complete this configuration, you will need to create or modify an access rule in "Access Control" on page 58. To modify an existing rule, click the Edit option next to the rule you want to modify. To create a new rule, click on the Add PC option.

From the Access Control Add PC section check the option for "WWW with URL Blocking" in the Client PC Service table to filter out the web sites and keywords specified below.

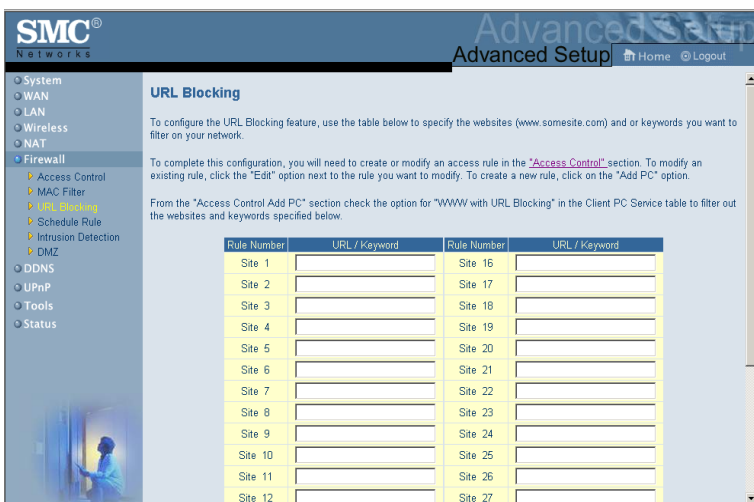

SMC® Networks Advanced Setup

Home Logout

- System
- WAN
- LAN
- Wireless
- NAT
- Firewall**
 - Access Control
 - MAC Filter
 - URL Blocking**
 - Schedule Rule
 - Intrusion Detection
 - DMZ
- DDNS
- UPnP
- Tools
- Status

URL Blocking

To configure the URL Blocking feature, use the table below to specify the websites (www.somesite.com) and or keywords you want to filter on your network.

To complete this configuration, you will need to create or modify an access rule in the "Access Control" section. To modify an existing rule, click the "Edit" option next to the rule you want to modify. To create a new rule, click on the "Add PC" option.

From the "Access Control Add PC" section check the option for "WWW with URL Blocking" in the Client PC Service table to filter out the websites and keywords specified below.

Rule Number	URL / Keyword	Rule Number	URL / Keyword
Site 1		Site 16	
Site 2		Site 17	
Site 3		Site 18	
Site 4		Site 19	
Site 5		Site 20	
Site 6		Site 21	
Site 7		Site 22	
Site 8		Site 23	
Site 9		Site 24	
Site 10		Site 25	
Site 11		Site 26	
Site 12		Site 27	

Use the above screen to block access to web sites or to web URLs containing the keyword specified in the table.

Configuring the Wireless Barricade g Router

Schedule Rule

The Schedule Rule feature allows you to configure specific rules based on Time and Date. These rules can then be used to configure more specific Access Control.

SMC®
Networks

Advanced Setup

Home Logout

System

WAN

LAN

Wireless

NAT

Firewall

- Access Control
- MAC Filter
- URL Blocking
- Schedule Rule
- Intrusion Detection
- DMZ

DDNS

UPnP

Tools

Status

Schedule Rule

This page defines schedule rule names and activates the schedule for use in the "Access Control" page.

Schedule Rule Table (up to 10 rules)

Rule Name	Rule Comment	Configure
Normal	office hours	Edit Delete

Add Schedule Rule


HELP

APPLY

CANCEL

Enables Schedule-based Internet access control.

1. Click Add Schedule Rule.
2. Define the settings for the schedule rule (as shown on the following screen).
3. Click OK and then click the APPLY button to save your settings.

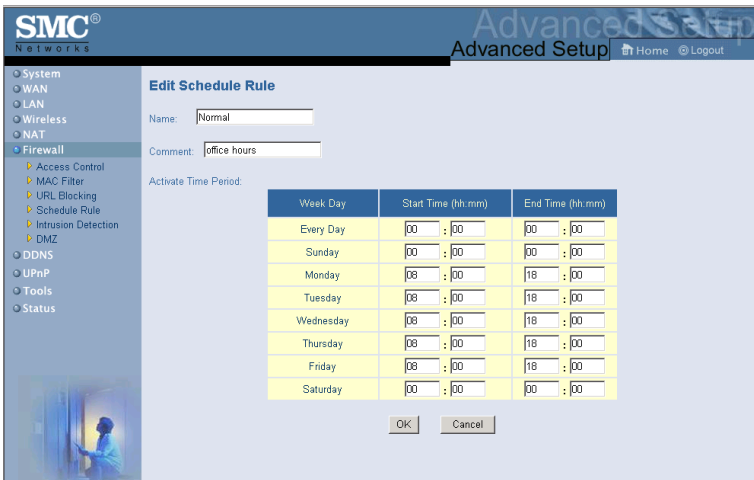

The screenshot displays the SMC Networks Advanced Setup interface. On the left is a navigation menu with categories: System, WAN, LAN, Wireless, NAT, Firewall (selected), DDNS, UPnP, Tools, and Status. The Firewall section is expanded, showing sub-items: Access Control, MAC Filter, URL Blocking, Schedule Rule (selected), Intrusion Detection, and DMZ. The main area is titled 'Edit Schedule Rule'. It contains a 'Name' field with the value 'Normal' and a 'Comment' field with the value 'office hours'. Below these fields is a section labeled 'Activate Time Period' which contains a table for setting the schedule.

Week Day	Start Time (hh:mm)	End Time (hh:mm)
Every Day	00 : 00	00 : 00
Sunday	00 : 00	00 : 00
Monday	08 : 00	18 : 00
Tuesday	08 : 00	18 : 00
Wednesday	08 : 00	18 : 00
Thursday	08 : 00	18 : 00
Friday	08 : 00	18 : 00
Saturday	00 : 00	00 : 00

At the bottom of the table are 'OK' and 'Cancel' buttons.

Configuring the Wireless Barricade g Router

Intrusion Detection

SMC®
Networks

Advanced Setup

Home

Logout

System

WAN

LAN

Wireless

NAT

Firewall

Access Control

MAC Filter

URL Blocking

Schedule Rule

Intrusion Detection

DMZ

DDNS

UPnP

Tools

Status

Intrusion Detection

When the SPI (Stateful Packet Inspection) firewall feature is enabled, all packets can be blocked. Stateful Packet Inspection (SPI) allows full support of different application types that are using dynamic port numbers. For the applications checked in the list below, the Barricade g will support full operation as initiated from the local LAN.

The Barricade g firewall can block common hacker attacks, including IP Spoofing, Land Attack, Ping of Death, IP with zero length, Smurf Attack, UDP port loopback, Snork Attack, TCP null scan, and TCP SYN flooding.

Intrusion Detection Feature

SPI and Anti-DoS firewall protection	<input checked="" type="checkbox"/>
RIP detect	<input checked="" type="checkbox"/>
Discard Ping To WAN	<input type="checkbox"/>

Stateful Packet Inspection

Packet Fragmentation	<input checked="" type="checkbox"/>
TCP Connection	<input checked="" type="checkbox"/>
UDP Session	<input checked="" type="checkbox"/>
FTP Service	<input checked="" type="checkbox"/>
H.323 Service	<input checked="" type="checkbox"/>
TFTP Service	<input checked="" type="checkbox"/>

SMC®
Networks

Advanced Setup

Home

Logout

System

WAN

LAN

Wireless

NAT

Firewall

Access Control

MAC Filter

URL Blocking

Schedule Rule

Intrusion Detection

DMZ

DDNS

UPnP

Tools

Status

When hackers attempt to enter your network, we can alert you by e-mail

Your E-mail Address:

SMTP Server Address:

POP3 Server Address:

User name:

Password:

Connection Policy

Fragmentation half-open wait: secs

TCP SYN wait: sec.

TCP FIN wait: sec.

TCP connection idle timeout: sec.

UDP session idle timeout: sec.

H.323 data channel idle timeout: sec.

DoS Detect Criteria:

Total incomplete TCP/UDP sessions HIGH: session

Total incomplete TCP/UDP sessions LOW: session

Incomplete TCP/UDP sessions (per min) HIGH: session

Incomplete TCP/UDP sessions (per min) LOW: session

Maximum incomplete TCP/UDP sessions number from same host: host

Incomplete TCP/UDP sessions detect sensitive time period: msec

Maximum half-open fragmentation packet number from same host: host

Half-open fragmentation detect sensitive time period: msec.

Flooding cracker block time: sec.

- **SPI and Anti-DoS firewall protection (Default: Enabled)** – The Intrusion Detection Feature limits access for incoming traffic at the WAN port. When the SPI (Stateful Packet Inspection) feature is turned on, all incoming packets will be blocked except for those types marked with a check in the Stateful Packet Inspection section.
- **RIP Defect (Default: Enabled)** – If an RIP request packet is not acknowledged to by the Router, it will stay in the input queue and not be released. Accumulated packets could cause the input queue to fill, causing severe problems for all protocols. Enabling this feature prevents the packets accumulating.
- **Discard Ping from WAN (Default: Disabled)** – Prevents the router from responding to any PING request on the WAN port.
- **Stateful Packet Inspection** – This is called a “stateful” packet inspection because it examines the contents of the packet to determine the state of the communications; i.e., it ensures that the stated destination computer has previously requested the current communication. This is a way of ensuring that all communications are initiated by the recipient computer and are taking place only with sources that are known and trusted from previous interactions. In addition to being more rigorous in their inspection of packets, stateful inspection firewalls also close off ports until connection to the specific port is requested.

When particular types of traffic are checked, only the particular type of traffic initiated from the internal LAN will be allowed. For example, if the user only checks FTP Service in the Stateful Packet Inspection section, all incoming traffic will be blocked except for FTP connections initiated from the local LAN.

Configuring the Wireless Barricade g Router

Stateful Packet Inspection allows you to select different application types that are using dynamic port numbers. If you wish to use the Stateful Packet Inspection (SPI) to block packets, click on the Yes radio button in the “Enable SPI and Anti-DoS firewall protection” field and then check the inspection type that you need, such as Packet Fragmentation, TCP Connection, UDP Session, FTP Service, H.323 Service, and TFTP Service.

- **When hackers attempt to enter your network, we can alert you by E-mail** – Enter your E-mail address. Specify your SMTP and POP3 servers, user name, and password.
- **Connection Policy** – Enter the appropriate values for TCP/UDP sessions as described in the following table.

Parameter	Defaults	Description
Fragmentation half-open wait	10 sec	Configures the number of seconds that a packet state structure remains active. When the timeout value expires, the router drops the unassembled packet, freeing that structure for use by another packet.
TCP SYN wait	30 sec	Defines how long the software will wait for a TCP session to synchronize before dropping the session.
TCP FIN wait	5 sec	Specifies how long a TCP session will be maintained after the firewall detects a FIN packet.
TCP connection idle timeout	3600 sec (1 hour)	The length of time a TCP session will be maintained if there is no activity.
UDP session idle timeout	30 sec	The length of time a UDP session will be maintained if there is no activity.
H.323 data channel idle timeout	180 sec	The length of time an H.323 session will be maintained if there is no activity.

DoS Detect Criteria

Set up DoS (Denial-of-Service) and port scan criteria in the spaces provided (as shown below).

Parameter	Defaults	Description
Total incomplete TCP/UDP sessions HIGH	300 sessions	Defines the rate of newly unestablished sessions that will cause the software to <i>start</i> deleting half-open sessions.
Total incomplete TCP/UDP sessions LOW	250 sessions	Defines the rate of newly unestablished sessions that will cause the software to <i>stop</i> deleting half-open sessions.
Incomplete TCP/UDP sessions (per min.) HIGH	250 sessions	Maximum number of allowed incomplete TCP/UDP sessions per minute.
Incomplete TCP/UDP sessions (per min.) LOW	200 sessions	Minimum number of allowed incomplete TCP/UDP sessions per minute. Set this to "0" if no minimum setting is required.
Maximum incomplete TCP/UDP sessions number from same host	10 sessions	Maximum number of incomplete TCP/UDP sessions from the same host.
Incomplete TCP/UDP sessions detect sensitive time period	300 msec	Length of time before an incomplete TCP/UDP session is detected as incomplete.
Maximum half-open fragmentation packet number from same host	30	Maximum number of half-open fragmentation packets from the same host.
Half-open fragmentation detect sensitive time period	1 sec	Length of time before a half-open fragmentation session is detected as half-open.
Flooding cracker block time	300 sec	Length of time from detecting a flood attack to blocking of the attack.

Configuring the Wireless Barricade g Router

DMZ

SMC[®]
Networks

Advanced Setup

Home Logout

System

WAN

LAN

Wireless

NAT

Firewall

Access Control

MAC Filter

URL Blocking

Schedule Rule

Intrusion Detection

DMZ

DDNS

UPnP

Tools

Status

DMZ[Demilitarized Zone]

If you have a local client PC that cannot run an Internet application properly from behind the NAT firewall, then you can open the client up to unrestricted two-way Internet access by defining a Virtual DMZ Host.

Enable DMZ: ☐ Yes ☒ No

Multiple PCs can be exposed to the Internet for two-way communications e.g. Internet gaming, video conferencing, or VPN connections. To use the DMZ, you must set a static IP address for that PC.

Public IP Address	Client PC IP Address
1. 10.1.28.90	192.168.2.0
2. 0.0.0.0	192.168.2.0
3. 0.0.0.0	192.168.2.0
4. 0.0.0.0	192.168.2.0
5. 0.0.0.0	192.168.2.0
6. 0.0.0.0	192.168.2.0
7. 0.0.0.0	192.168.2.0
8. 0.0.0.0	192.168.2.0

HELP APPLY CANCEL

If you have a client PC that cannot run an Internet application properly from behind the firewall, then you can open the client up to unrestricted two-way Internet access. Enter the IP address of a DMZ host to this screen. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

DDNS (Dynamic DNS) Settings

SMC® Networks Advanced Setup Home Logout

DDNS (Dynamic DNS) Settings

Dynamic DNS provides users on the Internet a method to tie their domain name(s) to computers or servers. DDNS allows your domain name to follow your IP address automatically by having your DNS records changed when your IP address changes.

This DNS feature is powered by TZO.com. With a DDNS connection you can host your own web site, email server, FTP site and more at your own location even if you have a dynamic IP address. To sign-up for a free 30-day trial click [here](#)

Dynamic DNS: ☒ Enabled ☐ Disabled

TZO Configuration

Domain Name:

E-mail:

Key: [Get free 30-day trial key!](#)

Control Panel: [Click here to login to your TZO control panel](#)

Server Configuration

Server IP:

Server Type:

Web Server: (HTTP) Port 80	<input type="checkbox"/>	Port 8000	<input type="checkbox"/>
FTP Server: Port 20	<input type="checkbox"/>	Port 21	<input type="checkbox"/>
Email Server: (POP3) Port 110	<input type="checkbox"/>	(SMTP) Port 25	<input type="checkbox"/>

Domain Name – A series of alphanumeric strings separated by periods that maps to the address of a the Router network connection and identifies the owner of the address.

Dynamic DNS provides users on the Internet with a method to tie their domain name to the router or server. DDNS allows your domain name to follow your IP address automatically by having your DNS records changed when your IP address changes.

The section also has a “Server Configuration” section that automatically opens the port options checked in the Virtual Server section. Simply enter in the IP Address of your server, such as a web server, and then click on the port option “HTTP Port 80” so users can access your server from the WAN connection (Internet).

Configuring the Wireless Barricade g Router

This DNS feature is powered by TZO.com. With a DDNS connection you can host your own web site, E-mail server, FTP site, and more at your own location even if you have a dynamic IP address. (Default: Disable)

UPnP (Universal Plug and Play) Setting




Enable UPnP by checking ON in the screen above. UPnP allows the device to automatically:

- dynamically join a network
- obtain an IP address
- convey its capabilities and learn about the presence and capabilities of other devices. (Default: OFF)

Tools

Use the Tools menu to back up the current configuration, restore a previously saved configuration, restore factory settings, update firmware, and reset the Router.


Tools - Configuration Tools

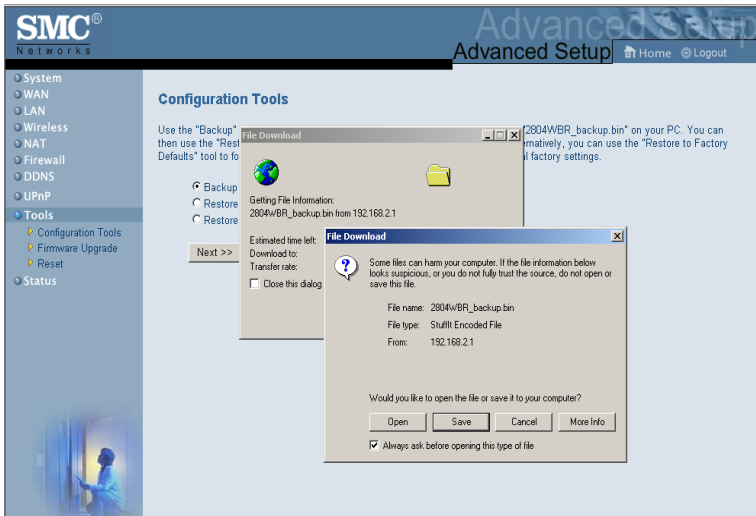

- Backup – Saves the Router's configuration to a file.
- Restore – Restores settings from a saved backup configuration file.
- Restore to factory defaults – Restores the Router settings back to the factory defaults.


Configuring the Wireless Barricade g Router

Tools - Firmware Upgrade

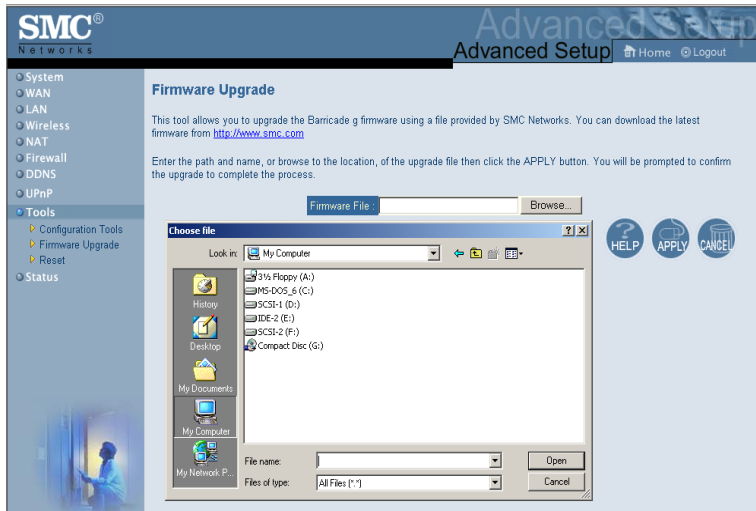

Use this screen to update the firmware or user interface to the latest versions. Download the upgrade file from the SMC web site (www.smc.com) and save it to your hard drive. In the Upgrade Target field, choose Firmware. Then click Browse to look for the previously downloaded file. Click APPLY. Check the Status page Information section to confirm that the upgrade process was successful.

Tools - Reset

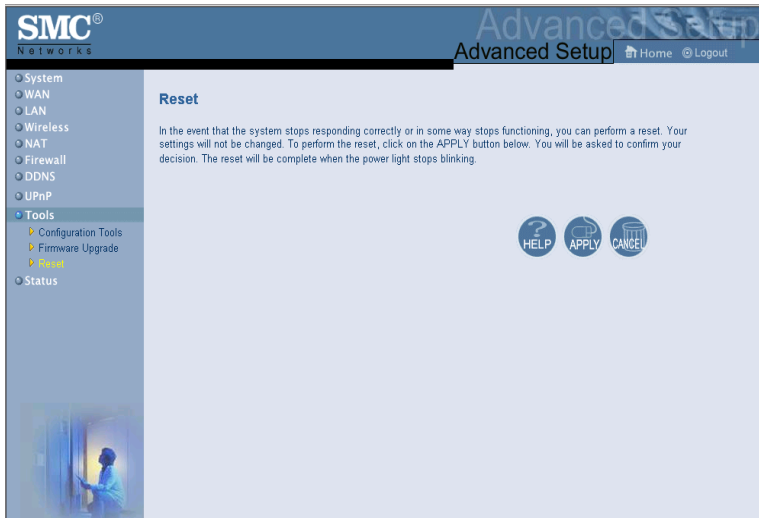


Click APPLY to reset the Router. The reset will be complete when the power LED stops blinking.

Note: If you use the Reset button on the front panel, the Router performs a power reset. If the button is held depressed for over five seconds, all the LEDs will illuminate and the factory settings will be restored.

Configuring the Wireless Barricade g Router

Status

The Status screen displays WAN/LAN connection status, firmware, and hardware version numbers, illegal attempts to access your network, as well as information on DHCP clients connected to your network.

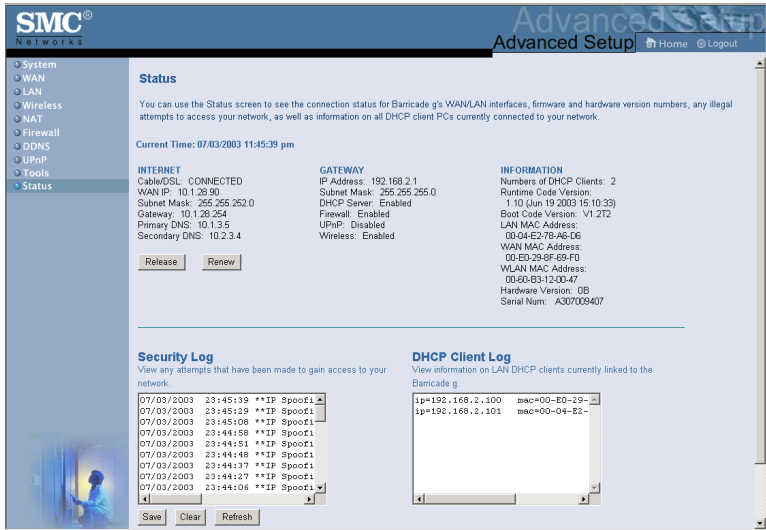

The following items are included on this screen:

Section	Description
INTERNET	Displays WAN connection type and status.
GATEWAY	Displays system IP settings, as well as DHCP and Firewall status.
INFORMATION	Displays the number of attached clients, the firmware versions, the physical MAC address for each media interface, as well as the hardware version and serial number.
Security Log	Displays illegal attempts to access your network.
Save	Click on this button to save the security log file.
Clear	Click on this button to delete the access log.
Refresh	Click on this button to refresh the screen.
DHCP Client Log	Displays information on all DHCP clients on your network.

TROUBLESHOOTING


The information outlined in this section describes some useful steps for getting your computer and the Router online.

A. Verify your connection to the Router

If you are unable to access the Router's web-based administration pages then you may not be properly connected or configured. The screen shots in this section were taken on a Windows 2000 machine, but the same steps will apply to Windows 95/98/Me/XP.

To determine your TCP/IP configuration status please follow the steps below:

1. Click Start then choose Run.
2. Type cmd or command to open a DOS prompt.
3. In the DOS window, type ipconfig and verify the information that is displayed.
4. If your computer is set up for DHCP, then your TCP/IP configuration should be similar to the information displayed:
 - IP Address: 192.168.2.X (x is number between 100 and 199 by default.)
 - Subnet: 255.255.255.0
 - Gateway: 192.168.2.1

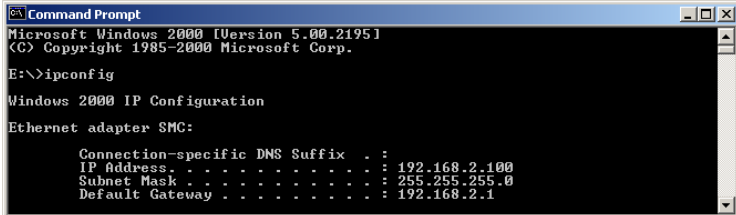

```
CA Command Prompt
Microsoft Windows 2000 [Version 5.00.2195]
(C) Copyright 1985-2000 Microsoft Corp.

E:\>ipconfig

Windows 2000 IP Configuration

Ethernet adapter SMC:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . . : 192.168.2.100
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.2.1
```

Troubleshooting

If you have an IP address that starts with 169.254.XXX.XXX then see the next section.

If you have another IP address configured, then see section C.

B. I am getting an IP Address that starts with 169.254.XXX.XXX

If you are getting this IP Address, then you need to check that you are properly connected to the Router.

Confirm that you have a good link light on the Router for the port this computer is connected to. If not, please try another cable.

If you have a good link light, please open up a DOS window as described in the previous section and type ipconfig/renew.

If you are still unable to get an IP Address from the Router, reinstall your network adapter. Please refer to your adapter manual for information on how to do this.


C. I have another IP Address displayed

If you have another IP address listed then the PC may not be configured for a DHCP connection. Please refer to “Configuring Client TCP/IP” on page 12 for information.

Once you have confirmed your computer is configured for DHCP, then please follow the steps below.

1. Open a DOS window as described above.

2. Type ipconfig/release.

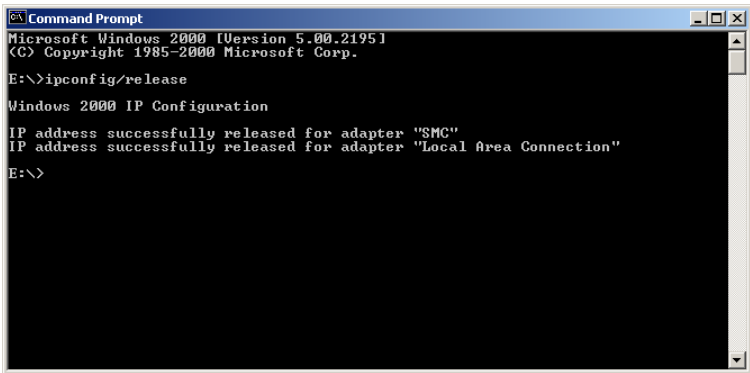

```
Microsoft Windows 2000 [Version 5.00.2195]
(C) Copyright 1985-2000 Microsoft Corp.


E:\>ipconfig/release

Windows 2000 IP Configuration

IP address successfully released for adapter "SMC"
IP address successfully released for adapter "Local Area Connection"

E:\>
```

3. Then type ipconfig/renew.

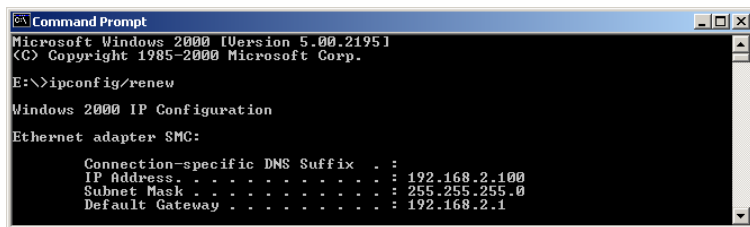

```
Microsoft Windows 2000 [Version 5.00.2195]
(C) Copyright 1985-2000 Microsoft Corp.

E:\>ipconfig/renew

Windows 2000 IP Configuration

Ethernet adapter SMC:

    Connection-specific DNS Suffix . : 
    IP Address . . . . . : 192.168.2.100
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.2.1
```

D. The 10/100 LED does not light after a connection is made.

1. Check that the host computer and the Router are both powered on.
2. Be sure the network cable is connected to both devices.
3. Verify that Category 5 cable is used if you are operating at 100 Mbps, and that the length of any cable does not exceed 100 m (328 ft).
4. Check the network card connections.
5. The 10BASE-T/100BASE-TX port, network card, or cable may be defective.

SPECIFICATIONS

Below is an outline of the technical specifications for the SMC2804WBR.

Standards

IEEE 802.3 10BASE-T Ethernet

IEEE 802.3u 100BASE-TX FastEthernet

IEEE 802.11b

IEEE 802.11g draft

WAN Interface

10BASE-T/100BASE-TX

LAN Interfaces

10BASE-T/100BASE-TX

4 RJ-45 ports: LAN data transfer rate is up to 10/20 Mbps (10BASE-T half/full duplex) or 100/200 Mbps (100BASE-TX half/full duplex)

Antenna

2 detachable antennas with reversed SMA connectors

Management

Browser-based management

Both DHCP Server and Client provided

Advanced Features

Dynamic IP Address Configuration – DHCP, DNS

Wireless Security – 64/128-bit WEP encryption, 802.1x, SSID broadcast disabled, MAC address filtering

Firewall – Access Control, hacker prevention, logging

Virtual Server via NAT & NAPT

Virtual Private Network – PPTP, L2TP, IPSec pass-through

Intrusion Detection, E-mail Alerts, Parental Control

Indicator Panel

Power, WLAN, WAN (Link, Activity), LAN (Link/Activity,
Speed - 10/100 Mbps)

Dimensions

130 x 85 x 32 mm (5.12 x 3.35 x 1.26 in.)

Weight

370 g (13.05 oz)

Input Power

9 V, 1 A

Maximum Current

0.04 A_{RMS} max. @ 110 V/240 V

Power Consumption

5 Watts max. @ 100-240 VAC

Internet Standards

RFC 826 ARP, RFC 791 IP, RFC 792 ICMP, RFC 768 UDP, RFC 793 TCP, RFC 854-859 TELNET, RFC 1321 MD5, RFC 1497 BOOTP Extension, RFC 1570 PPP LCP Extension, RFC 1631 NAT, RFC1661 PPP, RFC 1700 Assigned Numbers, RFC 1866 HTML, RFC 1945 HTTP, RFC 1994 CHAP, RFC 2131 DHCP, RFC 2637 PPTP

Temperature

Operating 0 to 40 °C (32 to 104 °F)

Storage -40 to 70 °C (-40 to 158 °F)

Humidity

5% to 95% (noncondensing)

Specifications

Compliances

CE Mark

Emissions

FCC Class B

VCCI Class B

Industry Canada Class B

EN55022 (CISPR 22) Class B

C-Tick - AS/NZS 3548 (1995) Class B

Immunity

EN 61000-3-2/3

EN 61000-4-2/3/4/5/6/8/11

Safety

CSA/NRTL (UL1950, CSA 22.2.950)

GS (EN60950)

CB (IEC60950)

FOR TECHNICAL SUPPORT, CALL:

From U.S.A. and Canada (24 hours a day, 7 days a week)
(800) SMC-4-YOU; (949) 679-8000; Fax: (949) 679-1481
From Europe (8:00 AM - 5:30 PM UK Time)
44 (0) 118 974 8700; Fax: 44 (0) 118 974 8701

INTERNET

E-mail addresses:

techsupport@smc.com
european.techsupport@smc-europe.com
support@smc-asia.com

Driver updates:

http://www.smc.com/index.cfm?action=tech_support_drivers_downloads

World Wide Web:

<http://www.smc.com>
<http://www.smc-europe.com>
<http://www.smc-asia.com>

FOR LITERATURE OR ADVERTISING RESPONSE, CALL:

U.S.A. and Canada:	(800) SMC-4-YOU;	Fax (949) 679-1481
Spain:	34-93-477-4935;	Fax 34-93-477-3774
UK:	44 (0) 1932 866553;	Fax 44 (0) 118 974 8701
France:	33 (0) 41 38 32 32;	Fax 33 (0) 41 38 01 58
Italy:	39 (0) 335 5708602;	Fax 39 02 739 14 17
Benelux:	31 33 455 72 88;	Fax 31 33 455 73 30
Central Europe:	49 (0) 89 92861-0;	Fax 49 (0) 89 92861-230
Nordic:	46 (0) 868 70700;	Fax 46 (0) 887 62 62
Eastern Europe:	34 -93-477-4920;	Fax 34 93 477 3774
Sub Saharian Africa:	27 0126610232;	Fax 27-11 314 9133
North West Africa:	216 71236616;	Fax 216 71751415
CIS:	7 (095) 789 35 73;	Fax 7 (095) 789 35 73
PRC (Beijing):	86-10-8251-1550;	Fax 86-10-8251-1551
PRC (Shanghai):	86-21-6485-9922;	Fax 86-21-6495-7924
Taiwan:	886-2-8797-8006;	Fax 886-2-8797-6288
Asia Pacific:	(65) 6 238 6556;	Fax (65) 6 238 6466
Korea:	82-2-553-0860;	Fax 82-2-553-7202
Japan:	81-3-5645-5715;	Fax 81-3-5645-5716
Australia:	61-2-8875-7887;	Fax 61-2-8875-7777
India:	91 22 5696 2790;	Fax 91 22 5696 2794
Middle East:	97 14 299 4466	Fax 97 14 299 4664
Thailand:	66 2 651 8733	Fax 66 2 651 8737

If you are looking for further contact information, please visit www.smc.com,
www.smc-europe.com, or www.smc-asia.com.



38 Tesla

Irvine, CA 92618

Phone: (949) 679-8000

Model Number: SMC2804WBR

Revision Number E072003-R03 F 1.0